## TrueNAS<sup>®</sup> Mini E+ and X Out of Band Management

Version 1.2



# Contents

1 Access the BIOS	1
1.1 IPMI Options	
1.2 DHCP Address Configuration	
1.3 Configuring a Static IP Address	
2 Logging in to the IPMI Web Interface	
3 Contacting iXsystems	6

Copyright © 2021 iXsystems, Inc. All rights reserved. All trademarks are the property of their respective owners.

This document contains instructions for configuring out-of-band management from the BIOS, if needed. When the hardware supports IPMI, the TrueNAS web interface also has IPMI configuration options. For more details, see <a href="https://www.truenas.com/docs/core/network/ipmi/">https://www.truenas.com/docs/core/network/ipmi/</a>.

Out of Band Management enables remote control of the system. Administrative control options include powering the system on and off, resetting the configuration, and viewing the system log. Before attempting to configure TrueNAS for out-of-band management, ensure that the out-of-band management port is connected to an appropriate network. Refer to the TrueNAS Mini Basic Setup Guide included with your TrueNAS Mini for detailed instructions on how to connect to physical ports on the system.

Connect the out-of-band management port before powering on the TrueNAS Mini. You might also need to connect a monitor and keyboard to the system.



#### **1** Access the BIOS

Press Delete at the splash screen while the TrueNAS Mini is booting to access the system BIOS.

Aptio Setup Main Advanced	Utility – Copyright (C) 2019 Amer Security Boot Event Logs Serv	rican Megatrends, Inc. /er Mgmt Exit
UEFI Version BMC Version	: C3338D2I-4L P1.00 : 1.00.00	Set the Date. Use Tab to switch between Date elements.
Processor Type @ 1.50GHz	: Intel(R) Atom(TM) CPU C3338	Default Ranges: Year: 2005–2099
Processor Speed Microcode Update L1 Cache Size L2 Cache Size	: 1500MHz : 506F1/0000002E : 56KB : 2048KB	Months: 1–12 Days: dependent on month
Total Memory Memory Mode	: 8GB, Single-Channel	←→: Select Screen ↑↓: Select Item
DDR4_A1 DDR4_A2	: R-DIMM 8GB (DDR4-1866) : None	Enter: Select +/-: Change Option F1: General Help F7: Discard Changes F9: Load UEEI Defaults
System Date	[Fri 04/10/2020]	▼ F10: Save and Exit ESC: Exit
Version 2.19.1266. Copyright (C) 2019 American Megatrends, Inc. AB		

#### 1.1 IPMI Options

Select the **Server Mgmt** tab and open the **BMC Network Configuration** options.

	Aptio Setup Utility – Copyri Main Advanced Security Boot	ght (C) 2019 An Event Logs Se	m <mark>erican Megatrends, Inc.</mark> erver Mgmt <mark>Exit</mark>
• •	BMC Self Test Status PASSED Wait For BMC [Enabled Inventory support [Enabled System Event Log BMC Network Configuration	]	Configure BMC network parameters ↔: Select Screen 1↓: Select Item Enter: Select +/-: Change Option E1: General Help
			F1: General Help F7: Discard Changes F9: Load UEFI Defaults F10: Save and Exit ESC: Exit
	Version 2.19.1266. Copyrigh	it (C) 2019 Amer	rican Megatrends, Inc. AB

#### 1.2 DHCP Address Configuration

Set **Out of band Access** to *Enabled*. Set the **Manual setting IPMI** to *No* to assign the out-of-band management IP address dynamically. The menu shows any IP addresses that have been assigned by DHCP.

Aptio Setup Utility	– Copyright (C) 2019 Ameri Serve	can Megatrends, Inc. r Mgmt
BMC Network Configuration	on	Enabled/Disabled BMC Out of band Access
BMC Out of band Access	[No Change]	
Out of band Access	Enabled	
Lan channel (Failover)		
Manual setting IPMI LAN	[No]	
Configuration address source	Static	↔: Select Screen ↑↓: Select Item
Station IP address	10.215.3.213	Enter: Select
Current subnet mask	255.255.255.128	+/-: Change Option
Current MAC address	d0-50-99-e3-5e-b0	F1: General Help
Current router IP	10.215.3.129	F7: Discard Changes
address		F9: LOAD DEFI Defaults
		ESC: Exit
Version 2.19.1266.	Copyright (C) 2019 America	n Megatrends, Inc.
		AB

#### 1.3 Configuring a Static IP Address

Set **Out of band Access** to *Enabled*. Set the **Manual setting IPMI** to *Yes* to manually assign the out-of-band management IP address. Enter the correct values for the **Station IP address**, **Current subnet mask**, and **Current router IP** fields to assign a static IP address for out-of-band management. Be sure to completely fill all four octets for the **Station IP address**.

Aptio Setup Utilit	y – Copyright (C) 2019 Ame Ser	erican Megatrends, Inc. Ever Mgmt
BMC Network Configurat	ion	Enabled/Disabled BMC Out of hand Access
BMC Out of band Access	[No Change]	
Out of band Access	Enabled	
Lan channel (Failover)		
Manual setting IPMI LAN	[No]	
Configuration address source	Static	↔: Select Screen ↑↓: Select Item
Station IP address	10.215.3.213	Enter: Select
Current subnet mask	255.255.255.128	+/-: Change Option
Current MAC address	d0-50-99-e3-5e-b0	F1: General Help
address	10.215.3.125	F7: Discard Changes
dadi ooo		F10: Save and Exit
		ESC: Exit
Version 2,19,1266	. Conuright (C) 2019 Ameri	ican Megatrends. Inc.
	· oopyr sance (o) corry millions	AB

Save the changes, exit the BIOS, and allow the system to boot.

#### 2 Logging in to the IPMI Web Interface

Connect to the TrueNAS Mini out-of-band management port by entering the IP address into a web browser from a system that is either within the same network or which is directly wired to the array. A login prompt appears.

ASRoc	ckRack
Username	
Password	
Remember Username	
Sign	mein
I forgot my password	
Language	
English	

Log in using the default credentials:

Username: ADMIN

Passwords are randomized for security. Check the sticker on the back of the system for your unique IPMI password. See <u>https://www.truenas.com/docs/sb-327</u> for more details.

### 3 Contacting iXsystems

For assistance, please contact iXsystems Support:

Contact Method	Contact Options
Web	https://support.ixsystems.com
Email	support@iXsystems.com
Telephone	Monday-Friday, <b>6:00AM</b> to <b>6:00PM</b> Pacific Standard Time: • US-only toll-free: <b>1-855-473-7449 option 2</b> • Local and international: <b>1-408-943-4100 option 2</b>
Telephone	Telephone After Hours (24x7 Gold Level Support only): • US-only toll-free: <b>1-855-499-5131</b> • International: <b>1-408-878-3140</b> (International calling rates will apply)