
## TrueNAS® X-Series Network Port IDs

v.231101

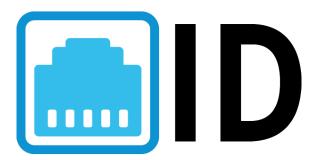



# Contents

1	Introduction	1
2	X10 and X20	1
3	Additional Resources	1
4	Contacting iXsystems	1

### 1 Introduction

By default, a TrueNAS X-Series identifies its network ports with ixl followed by a number.

The tables below show the default names for X-Series ports and any networking cards qualified by iXsystems.

#### 2 X10 and X20

#### **Network A**

NIC	Port 0 ID	Port 1 ID	Port 2 ID	Port 3 ID
Integrated	igb0	igb1		

#### **Network B**

NIC	Port 0 ID	Port 1 ID	Port 2 ID	Port 3 ID
Base-T 10GbE x4	ixl3	ixl2	ixl1	ixl0
SR 10GbE x4	igb3	igb2	igb1	igb0
SR 10GbE x2	cc0	cc1		
SR 25GbE x2	cc0	cc1		
SR 40GbE x2	cxl1	cxI0		
SR 40GbE (4x10 mode)	Disabled	cxl0123		

### **3 Additional Resources**

The TrueNAS Documentation Hub has complete software configuration and usage instructions. Click **Guide** in the TrueNAS web interface or go directly to:

https://www.truenas.com/docs

Additional hardware guides and articles are in the Documentation Hub's Hardware section:

https://www.truenas.com/docs/hardware

The TrueNAS Community forums provide opportunities to interact with other TrueNAS users and discuss their configurations:

https://www.truenas.com/community

## **4 Contacting iXsystems**

Having issues? Please contact iX Support to ensure a smooth resolution.

Contact Method	Contact Options
Web	https://support.ixsystems.com
Email	support@iXsystems.com
Telephone	Monday-Friday, 6:00AM to 6:00PM Pacific Standard Time:  • US-only toll-free: 1-855-473-7449 option 2  • Local and international: 1-408-943-4100 option 2
Telephone	Telephone After Hours (24x7 Gold Level Support only):  • US-only toll-free: 1-855-499-5131  • International: 1-408-878-3140 (International calling rates will apply)

**Page 1** v. 231101