


TrueNAS® H-Series User Manual

v.24041

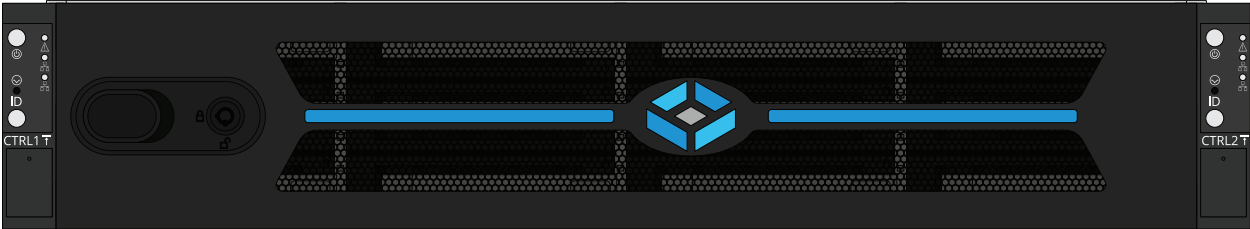

Contents

1 Introduction	1
2 Safety	2
2.2 Anti-Static Precautions	2
2.3 Personal Protective Equipment (PPE)	2
2.4 Handling the System	2
3 Recommended Tools	2
4 Specifications	3
4.1 H-Series Models	3
5 Space Requirements	4
6 Buttons and LED Indicators	5
6.1 Front Indicators and Buttons	5
6.2 Drive Indicators	5
7 Racking Procedure	6
7.1 Remove Chassis Rail from Rack Rail	6
7.2 Install the Chassis Rail on the System	7
7.3 Install the Rack Rail in the Rack	8
7.4 Install the System in the Rack	9
7.5 Secure the System to the Rack	10
7.6 Install Drives	11
7.7 Install Bezel	12
7.8 Install Cables	13
7.9 Boot the System	14
8 SAS Connections	15
8.1 ES24	15
8.2 ES24F	16
8.3 ES60	16
9 Unracking Procedure	17
9.1 Uninstall Cables	17
9.2 Remove Drives	19
9.3 Remove the System From the Rack	20
9.4 Remove the Rack Rail From the Rack	21
9.5 Remove the Chassis Rail From the System	22
10 Drive Replacement	23
10.1 HDDs	23
10.2 SSDs	24
11 Additional Resources	25
12 Contacting iXsystems	25


1 Introduction

The TrueNAS H-Series is a 2U, 12-bay, High-Availability storage array with redundant power supplies.

You can find your system serial number on the pull-out black tab next to PSU1.

Your system comes with the TrueNAS operating system preloaded.

Review the safety considerations and requirements before interacting with the H-Series.

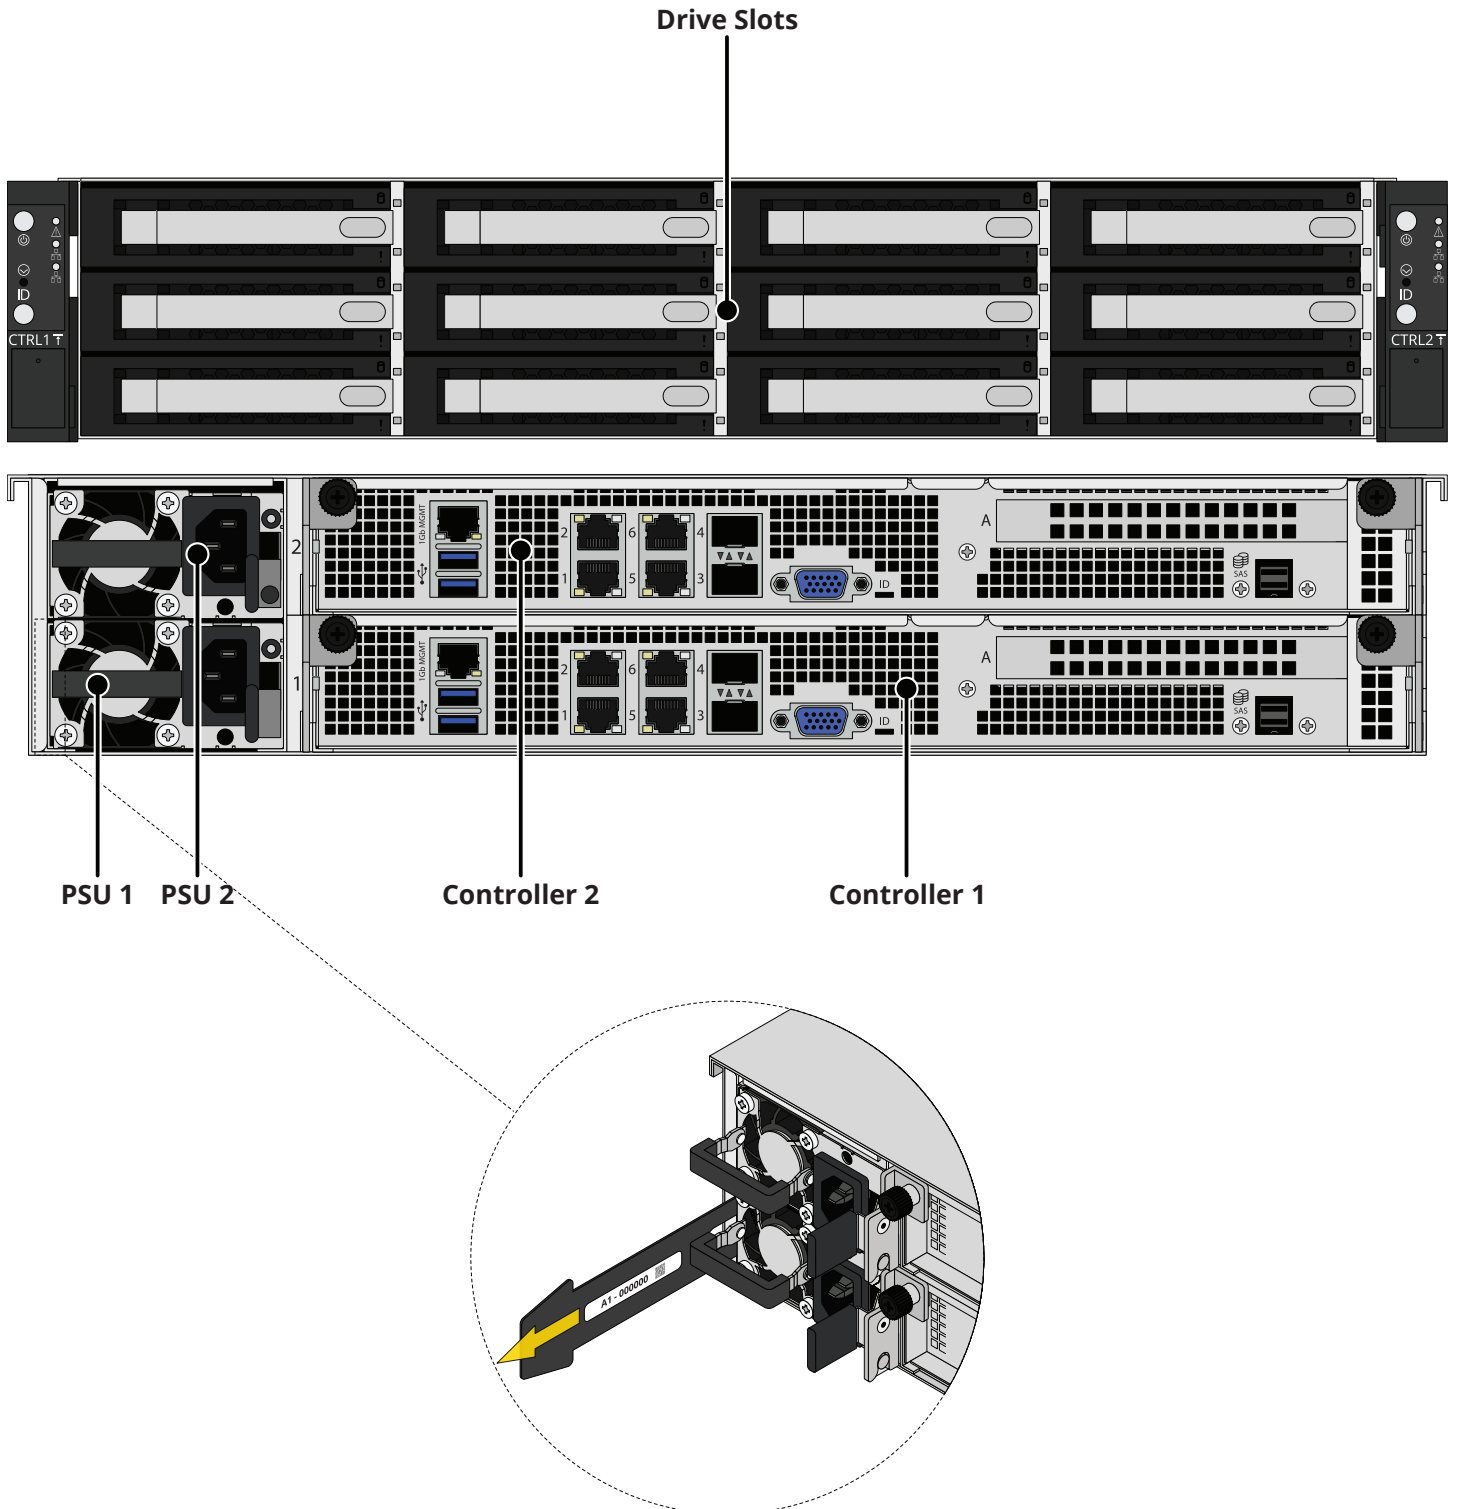

2 Safety

2.2 Anti-Static Precautions

⚠ Warning - Electrostatic Discharge (ESD)

Static electricity can build up in your body and discharge when touching conductive materials. Electrostatic Discharge (ESD) is harmful to sensitive electronic devices and components. Keep these safety recommendations in mind before opening the system case or handling non-hot-swappable system components.

- Turn off the system and remove power cables before opening the case or touching internal components.
- Place the system on a clean, hard work surface like a wooden tabletop. Use an ESD dissipative mat if possible to protect the internal components.
- Touch the metal chassis with your bare hand to dissipate static electricity in your body before handling any internal components, including components not yet installed in the system. We always recommend wearing an anti-static wristband and using a grounding cable.
- Store all system components in anti-static bags.

2.3 Personal Protective Equipment (PPE)

⚠ Warning - PPE

Wear proper PPE, like anti-static wrist straps and smocks before touching any sensitive equipment inside the chassis. If you are unsure how to properly replace any parts, contact iXsystems Support.

2.4 Handling the System

Hold the system from the sides or bottom whenever possible. Always be mindful of loose cabling or connectors, and avoid pinching or bumping these elements.

These instructions use “left” and “right” according to your perspective when facing the system or rack.

⚠ Warning - Damage or Injury

The H-Series weighs 67 lbs (30.4 kg) fully-loaded and requires a minimum of **two** people to lift.

When handling rails, system components, or drives, never force movement if a component seems stuck. Gently remove the component and check for pinched cables or obstructing material before installing it again. Installing a component with excessive force can damage the system or cause personal injury.

3 Recommended Tools

We recommend these tools when interacting with the TrueNAS H-Series:

- Long #2 Phillips head screwdriver
- Tape measure
- Level

4 Specifications

Drive Count	12 3.5-inch SAS HDDs or SSDs	
Cooling Fans	4	
Power Supplies (200v)	2	
Power Distribution Requirements	200V - 240V	
Controllers	2	
Dimensions (H x W x L)	3.5" x 19" x 26.8"	89mm x 483mm x 681mm
Net Weight (Fully Loaded)	67 lbs	30.4 kg
Operating Temperature	41°F - 95°F	5°C - 35°C
Non-Operating Temperature	-22°F - 140°F	-30°C - 60°C

4.1 H-Series Models

	H10
Processor	Quad-Core
RAM (Max)	64 - 128 GB
Read Cache (Max)	1600 GB SAS SSD
Write Cache (Max)	16 GB SAS SSD
Networking	4x 1G Base-T (Standard) 2x 10/25 GbE (Optical)
Max Storage (Raw)	1.5 PB
Storage Expansion Options	1x ES24/F or ES60
Average Power Draw	200W
Peak Power Draw	250W
Max Heat Output	700 BTU/h

5 Space Requirements

ⓘ Note - Rack Space

The H-Series requires 2U of rack space and a #2 Phillips head screwdriver to install in a rack.

The system is 26.7" (68 cm) long. Rack posts must be 23" - 35.75" (58.4 cm-90.8 cm) apart to install the rail kit.


We recommend having at least 60" of space in front of the rack and at least 32" of space behind the rack.

ⓘ Important - Damage or Injury

When handling rails, system components, or drives, never force movement if a part seems stuck or does not insert properly. Gently remove the part and check for pinched cables or obstructing material before installing it again. Installing a part with excessive force can damage the system or cause personal injury.


⚠ Warning - Team Lift

The H-Series requires two people to lift safely. Failure to follow safety recommendations can lead to severe system damage or personal injury.

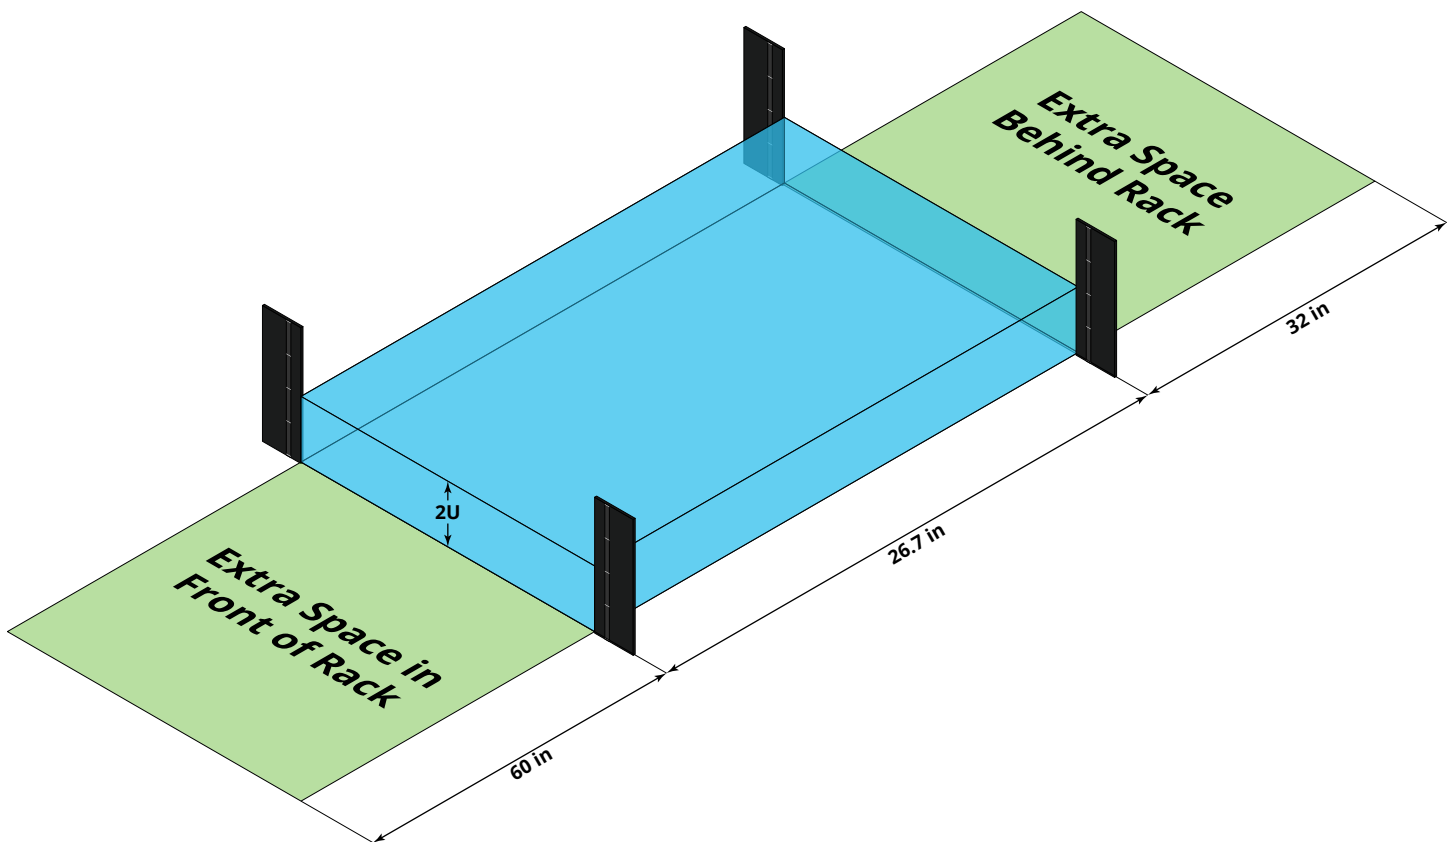


6 Buttons and LED Indicators

6.1 Front Indicators and Buttons

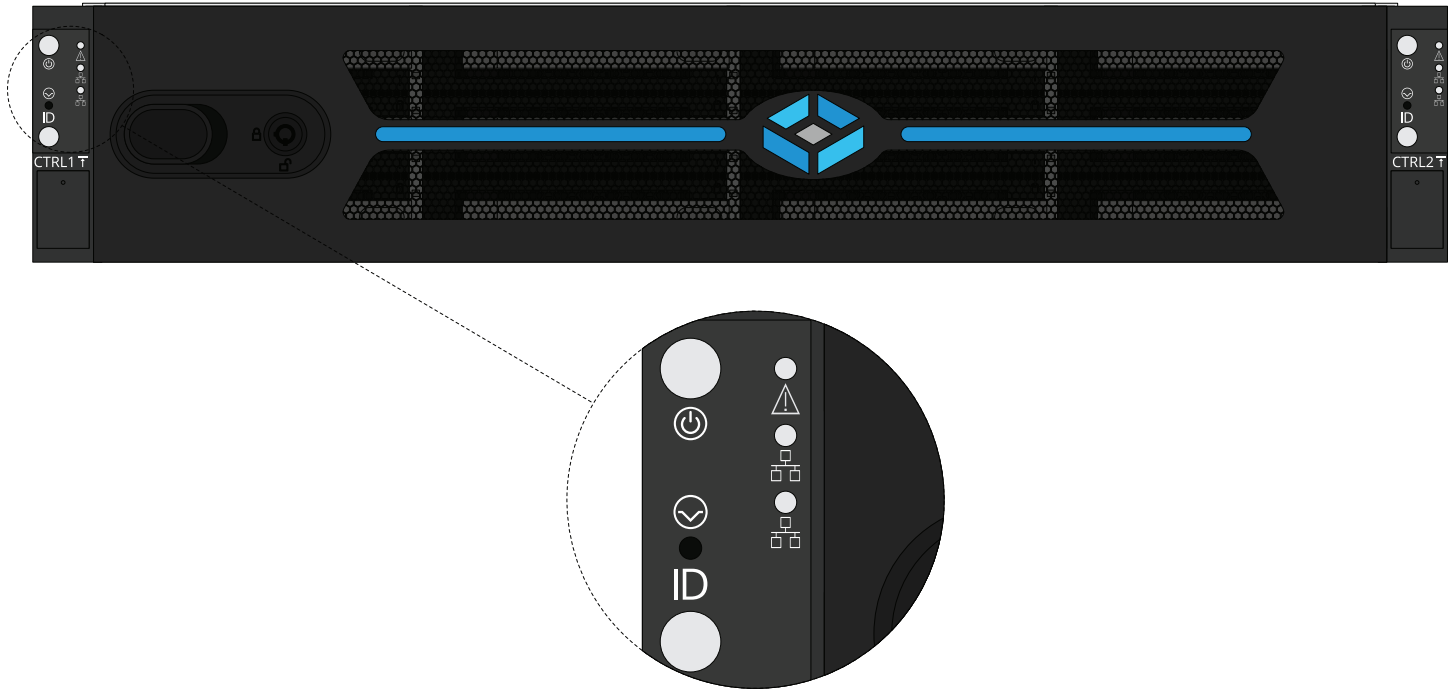

Light / Button	Function	Color and Indication
	Powers the system on/off	Blue (Solid): System Ready
	Resets the system	N/A
ID	Activates Locate ID	Blue (Flashing): Locate ID active
	N/A	Green (Flashing): Component Fault
	N/A	Amber (Flashing): Link Active

6.2 Drive Indicators

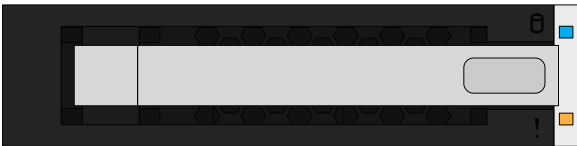



Light	Color and Indication
	Blue (Flashing): Disk Activity
	Amber (Solid): Drive Fault

7 Racking Procedure

7.1 Remove Chassis Rail from Rack Rail


The rail kit separates into two pieces, the inner chassis rail and the outer rack rail.

Slide the chassis rail out of the rack rail until it stops, then push the metal safety catch and remove the chassis rail.

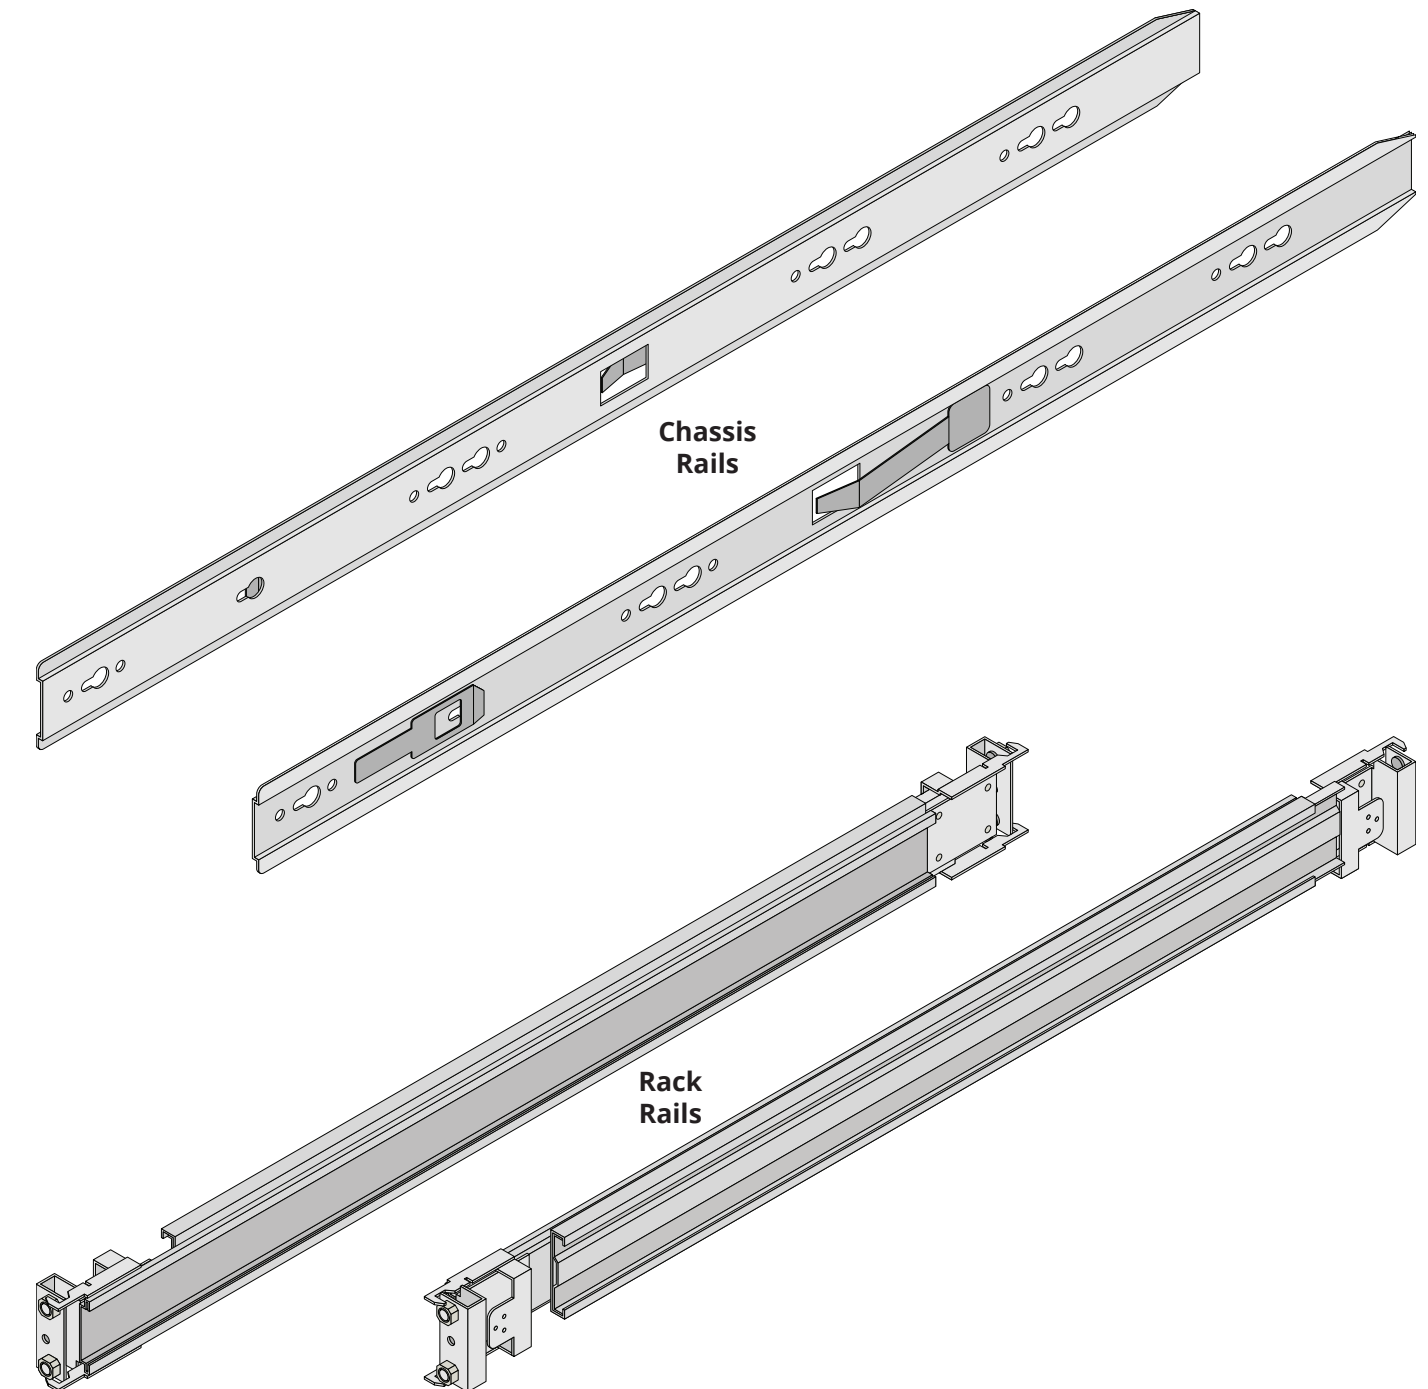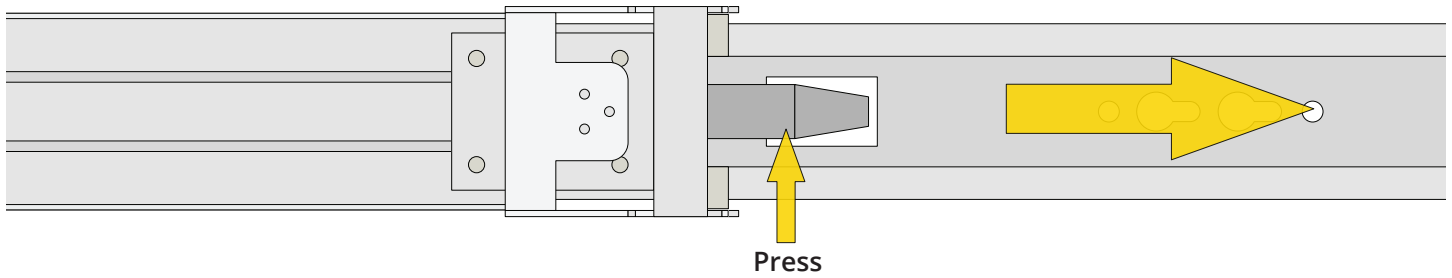

7.2 Install the Chassis Rail on the System


Fit the rail keyholes over the mounting pegs on the system and slide the rail toward the back of the system until it locks. Use a round M4 rail screw to secure the rail to the chassis. Repeat the process for the second chassis rail.

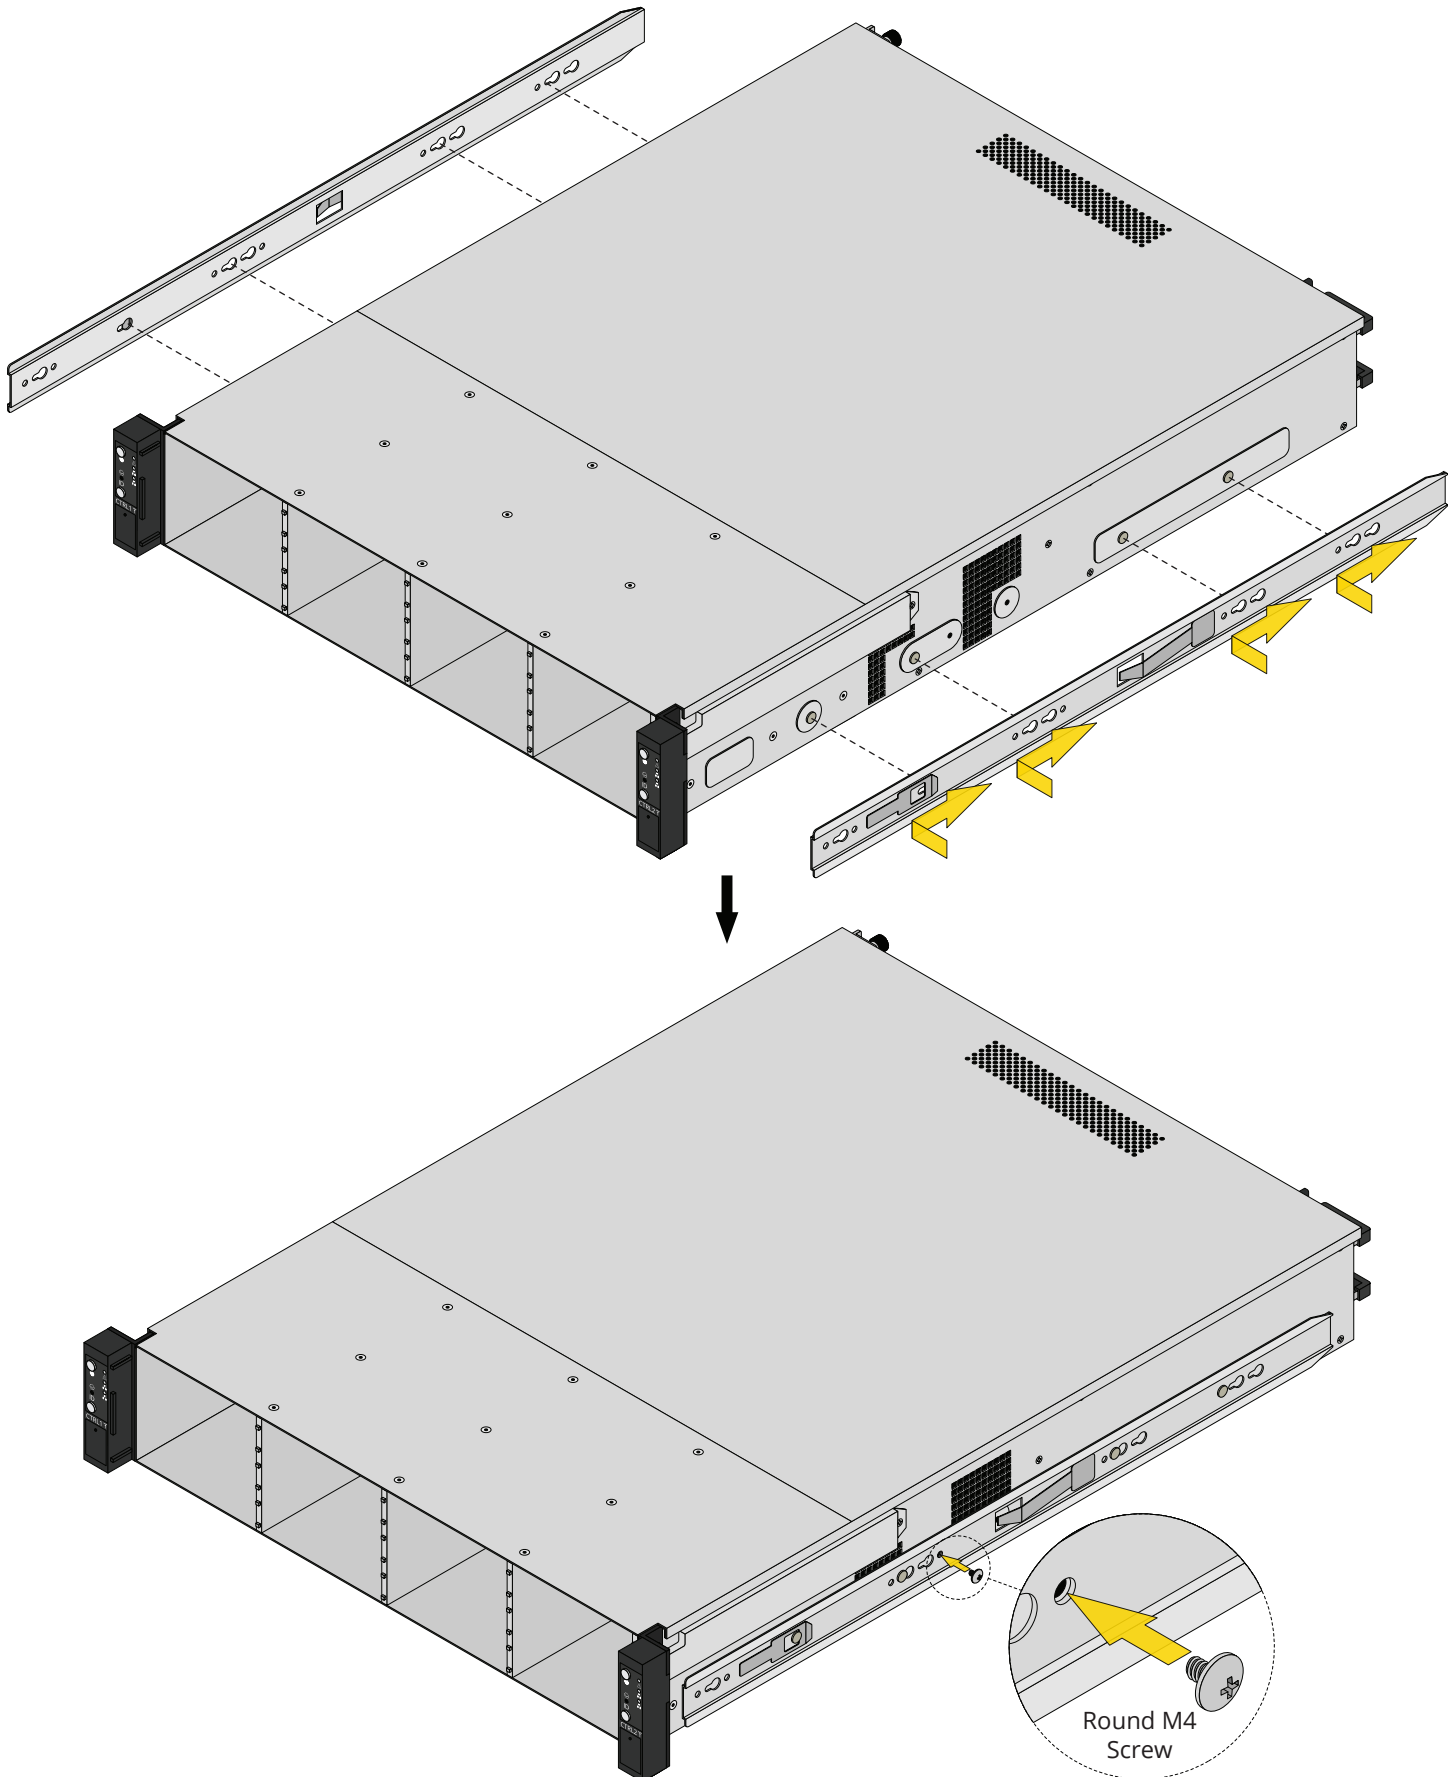

7.3 Install the Rack Rail in the Rack

Align the rail end stamped "FRONT" with the front of the rack. Face the "FRONT" text inside the rack so the chassis rails can slide into the rack rails. Align the rail front pegs with the top and bottom holes in the bottom 1U and push the rail into the holes until the spring latch locks the rail in place.

After you install the front of the rail, extend the back of the rack rail towards the equivalent attach points on the rear rack post. Make sure the rail remains level from front to back. Repeat this process to install the other rack rail.

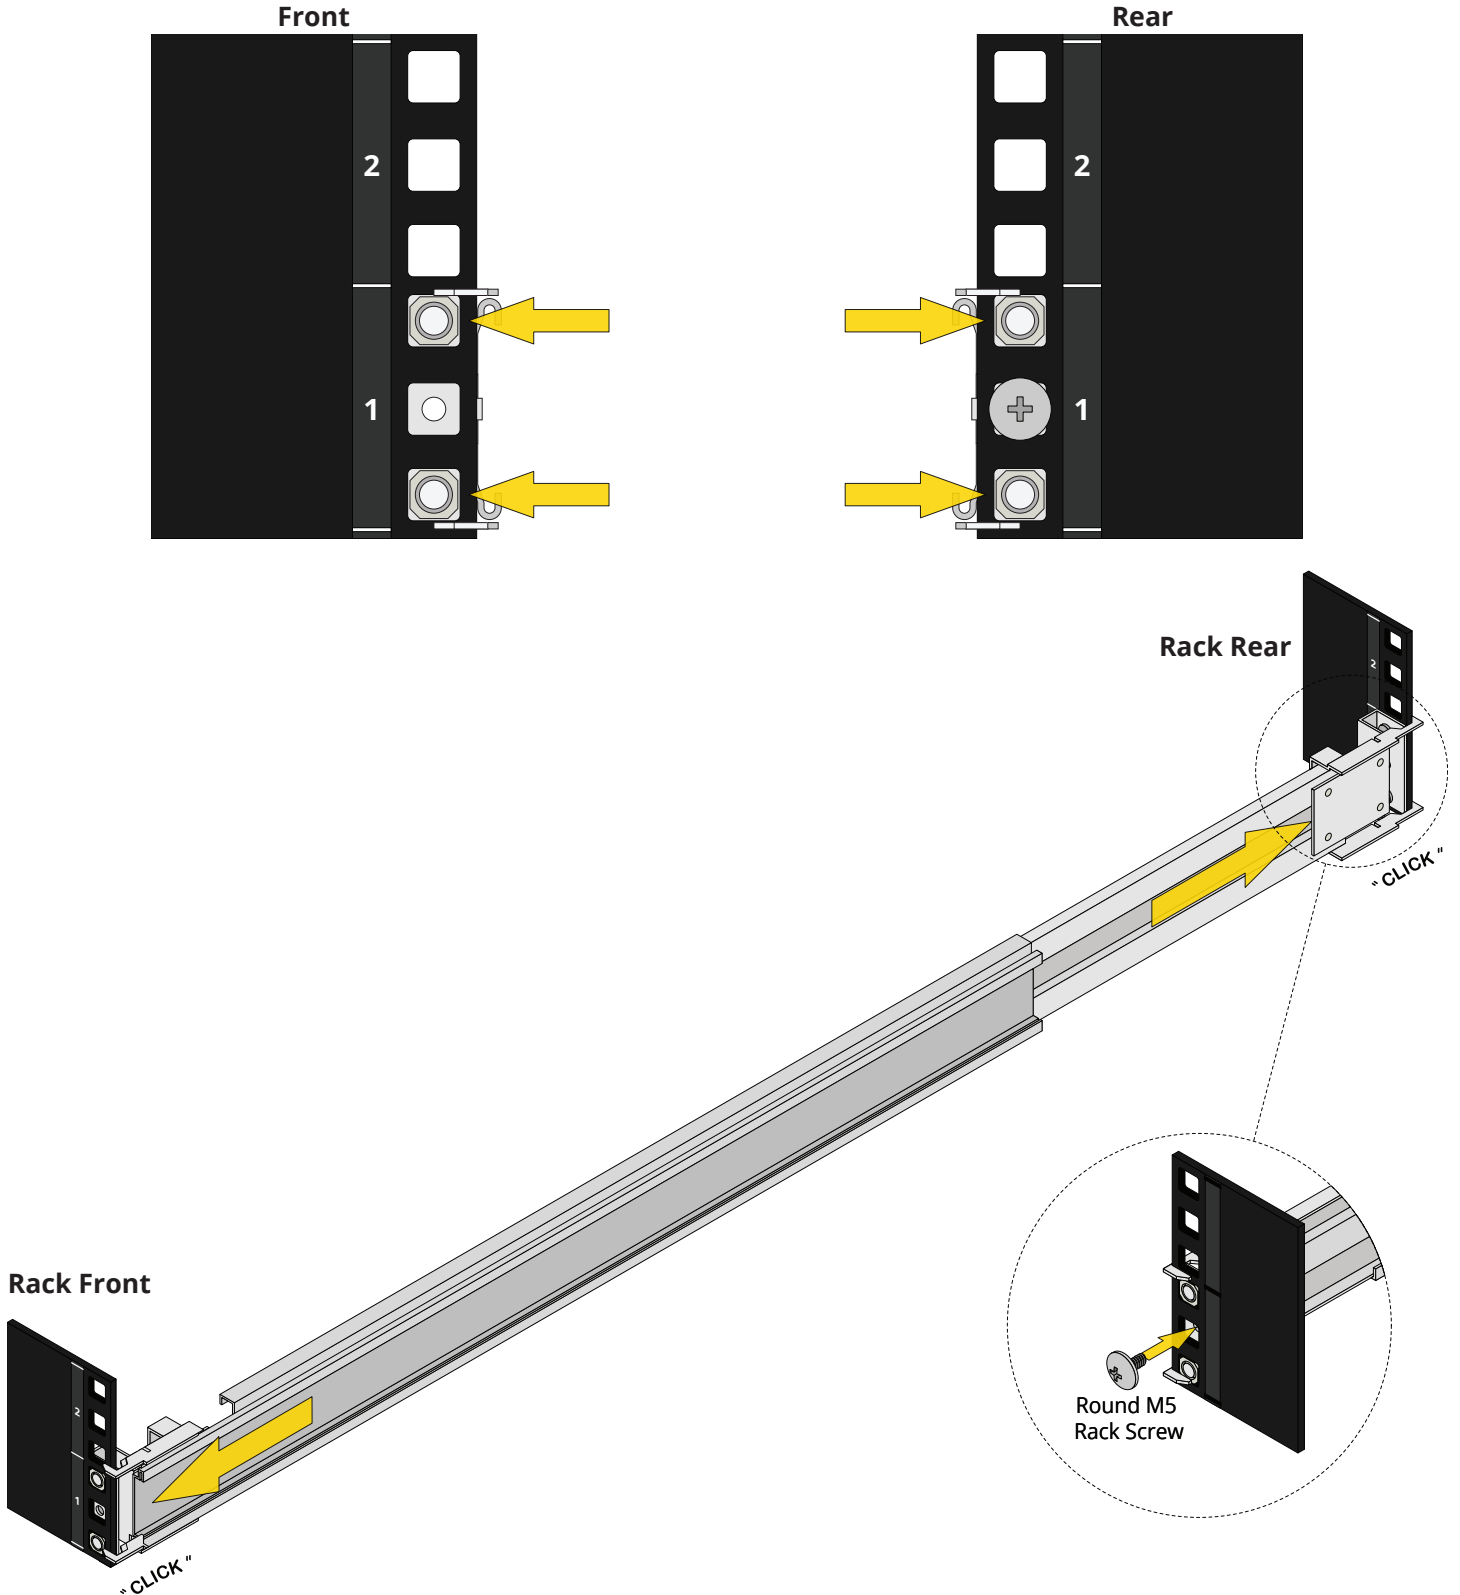


7.4 Install the System in the Rack

Team-lift the system and align the chassis rails with the rack rails.

Slide the ends of the chassis rails into the rack rails and push the system into the rack until the metal safety catches on the chassis rails click and lock the system into place.


Squeeze the safety catches against the sides of the system and slide the system into the rack.

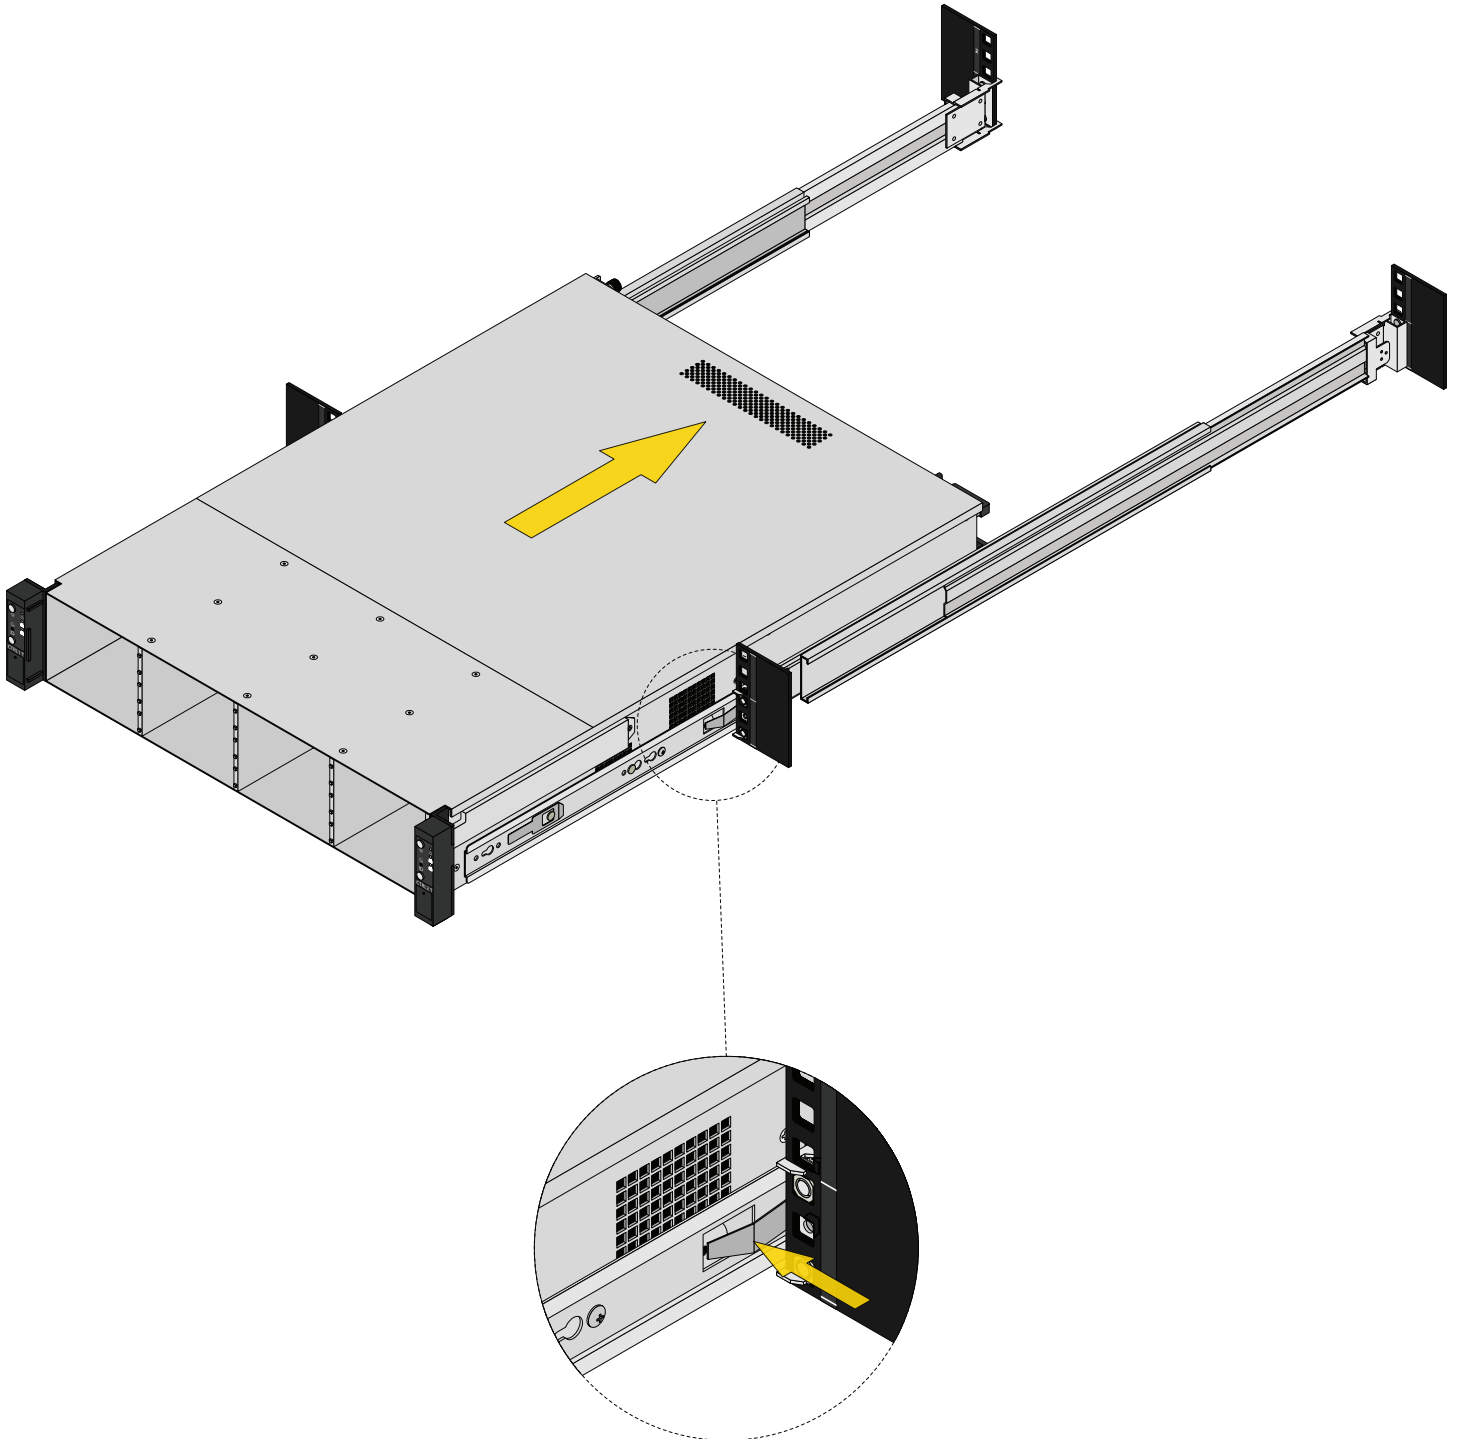

7.5 Secure the System to the Rack

The rail kit includes several round M5 rack screws you can use to secure the chassis ears to the rack.

Push in the hinged doors on each ear to open them, then install the round M5 rack screws.

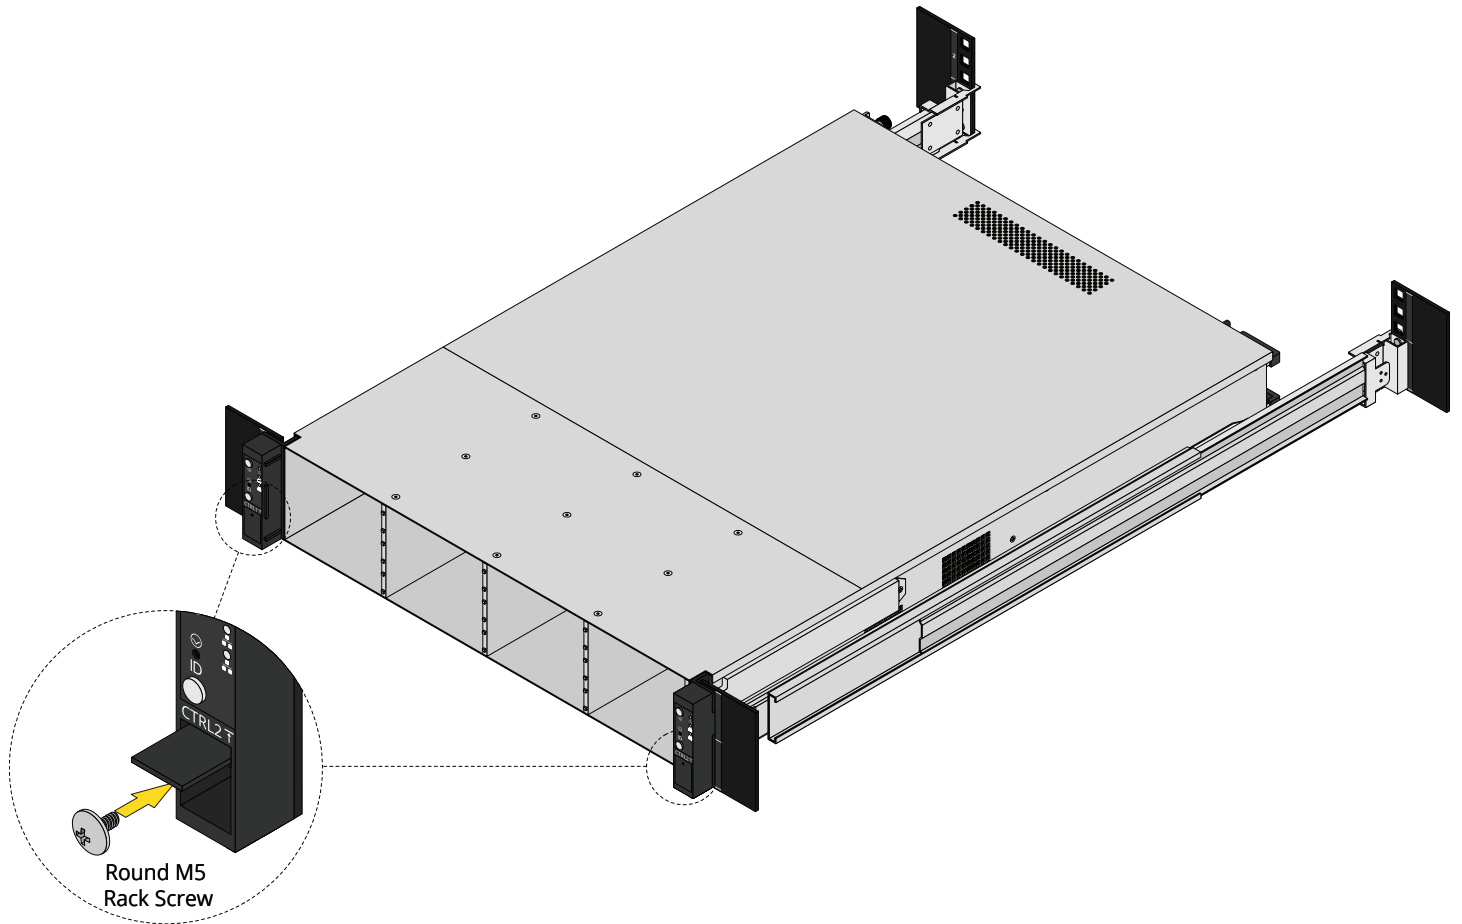


7.6 Install Drives

Tip - Description

We recommend a standard drive tray installation order to simplify support:

- SSD drives for write and read caches (if present)
- HDDs or SSDs for data storage
- Air baffles for remaining empty bays (if present)


Install the first drive in the top left bay. Install the next drive to the right of the first. Install remaining drives to the right across the row. After filling a row, move down to the next row and start again with the left bay.

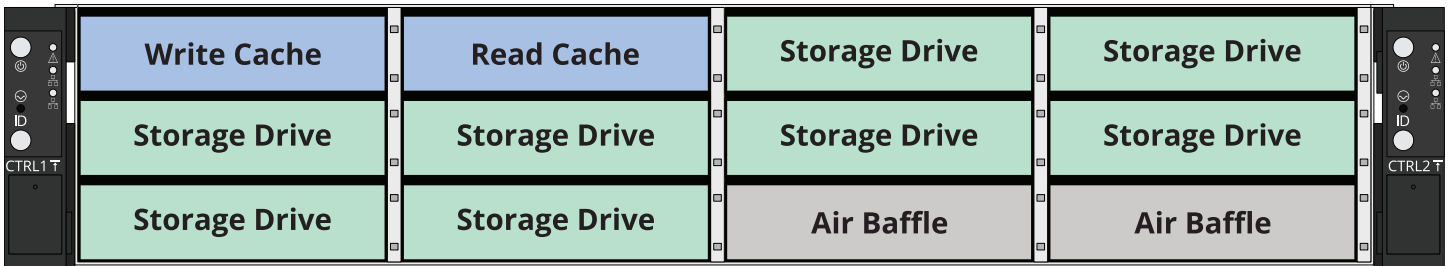




Retrieve a drive assembly and press the locking arm release on the left side of the tray. Drive trays either contain HDDs or SSDs depending on your order.

Align the drive assembly with an empty slot on the system and push it in until the locking arm begins to swing closed. Gently close the arm to fully seat the drive tray and lock it into the system.

Drive Assembly with SSD

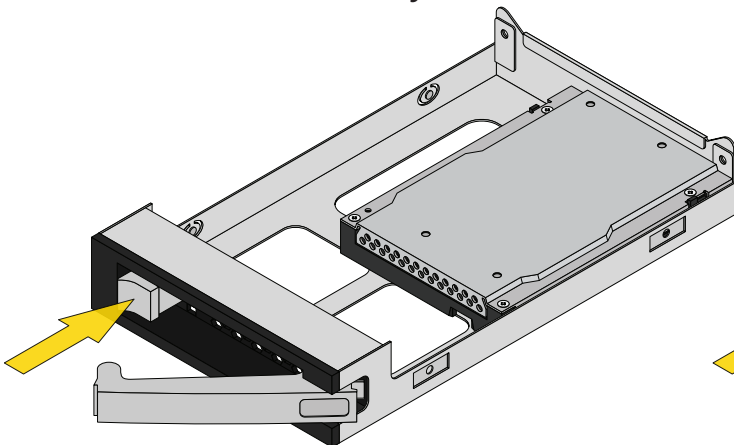


Drive Assembly with HDD

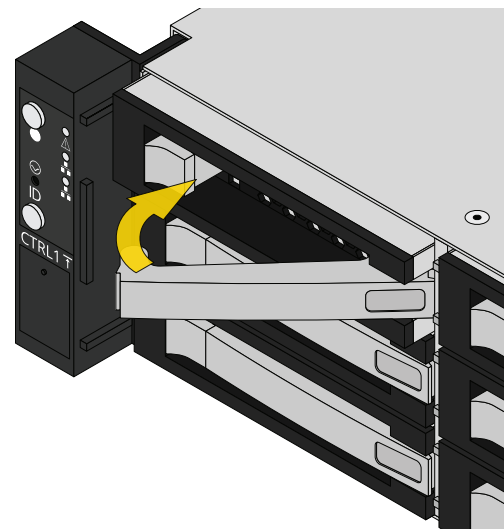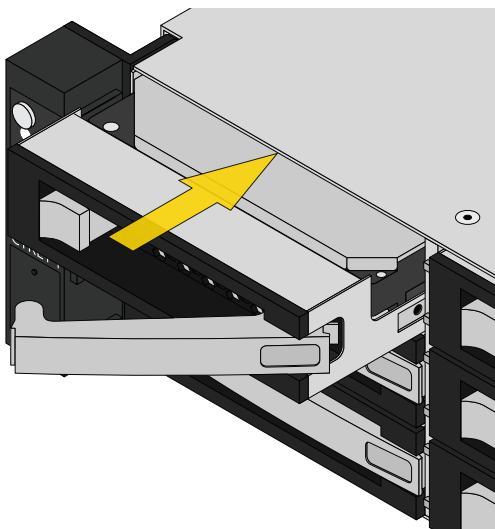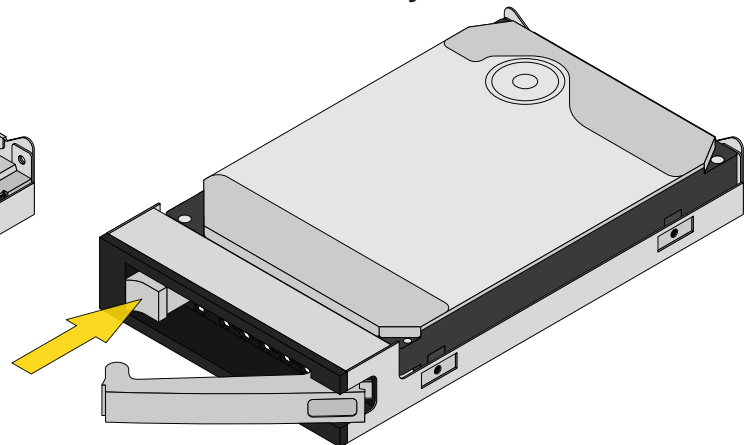

7.7 Install Bezel

Align the right side of the bezel with the attach points on the right ear, then push the left side of the bezel into the attach points on the left ear until it clicks and locks into place.

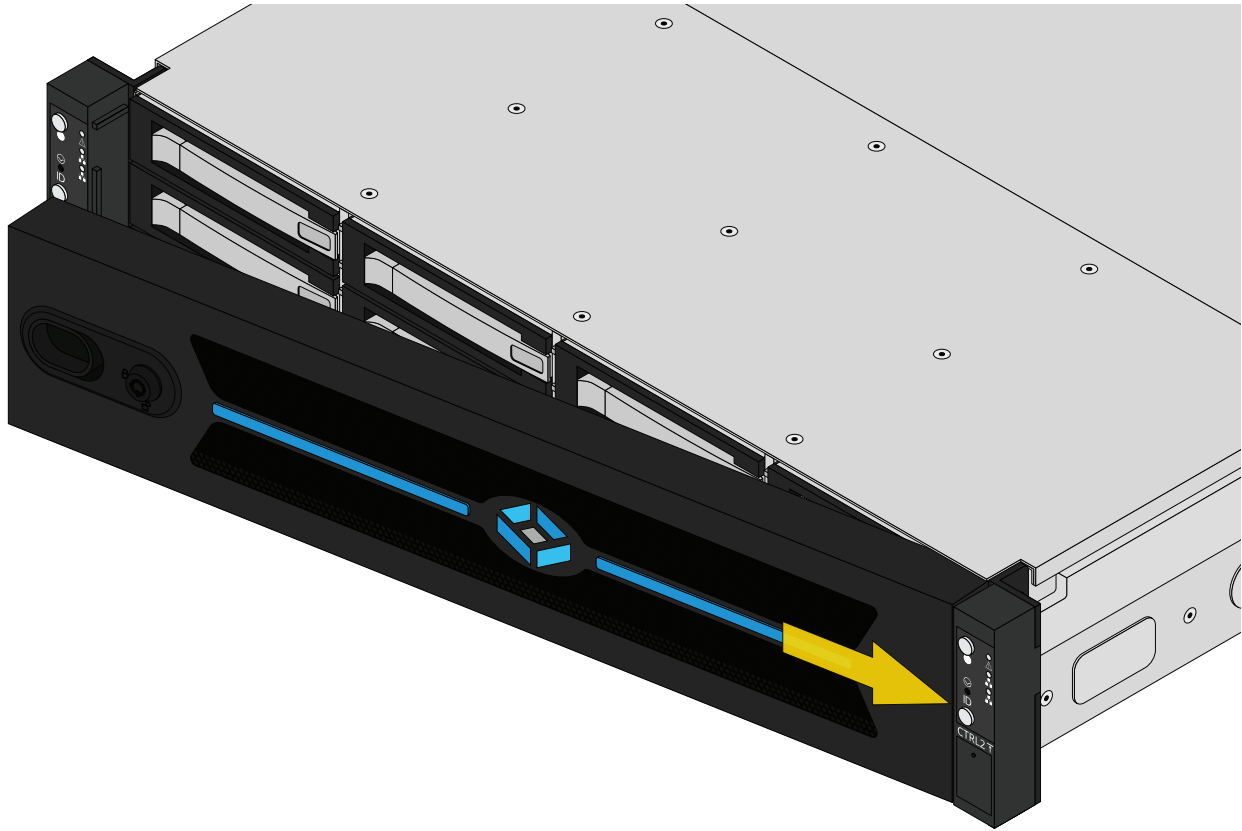


7.8 Install Cables

Connect one ethernet network cable from your local switch or management network to the Out-of-Band Management (OOBM) port, and another one to the first 1GbE ports on both controllers.

Next, connect a monitor and keyboard to the VGA and USB ports on the same controller.



Finally, connect the power cables to both power supplies, then plug them into a power distribution unit.

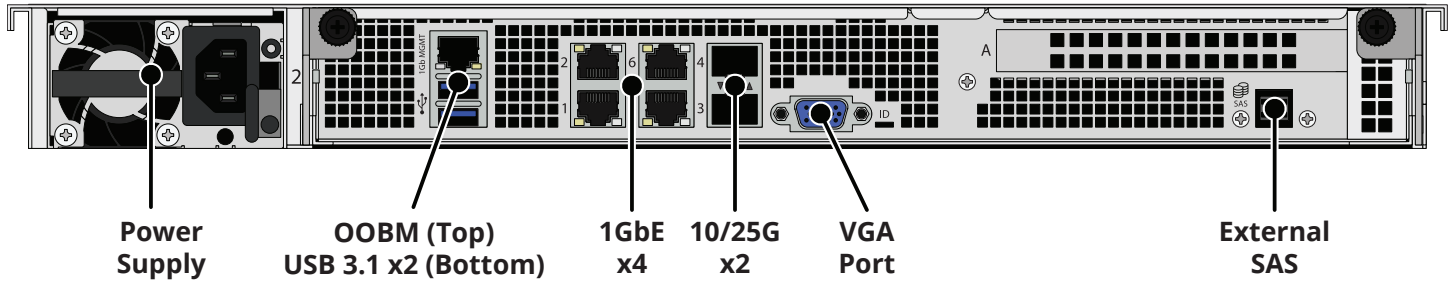

7.8.1 10/25G Cabling

If you wish to use the 10/25G networking ports, you can set them up now. Insert SR optics into the bottom port with the gold connectors facing up, then plug the SR cable into the back of the optics.

Insert the other optics in the top port with the gold connectors facing down, then plug the cable into the optics.

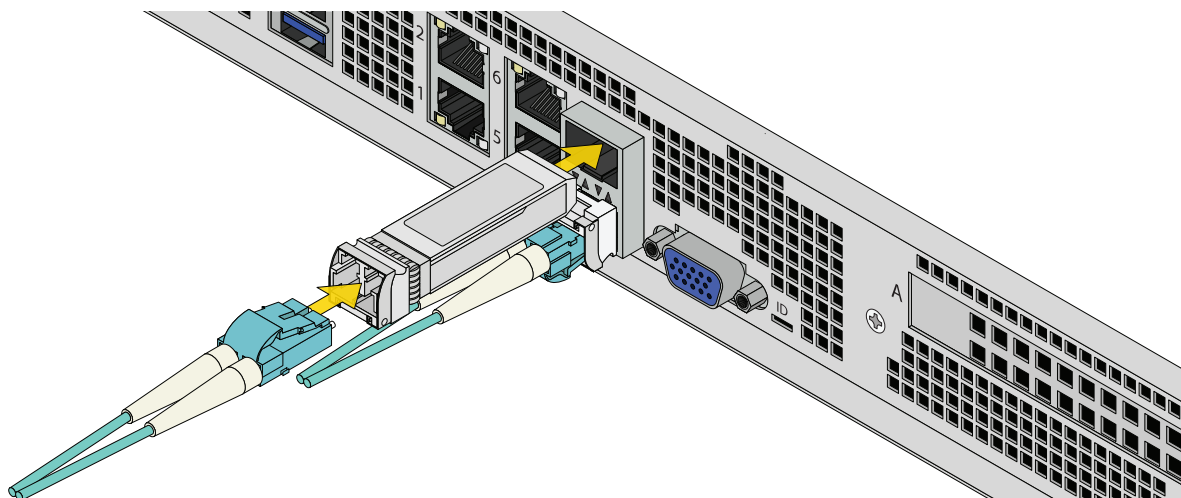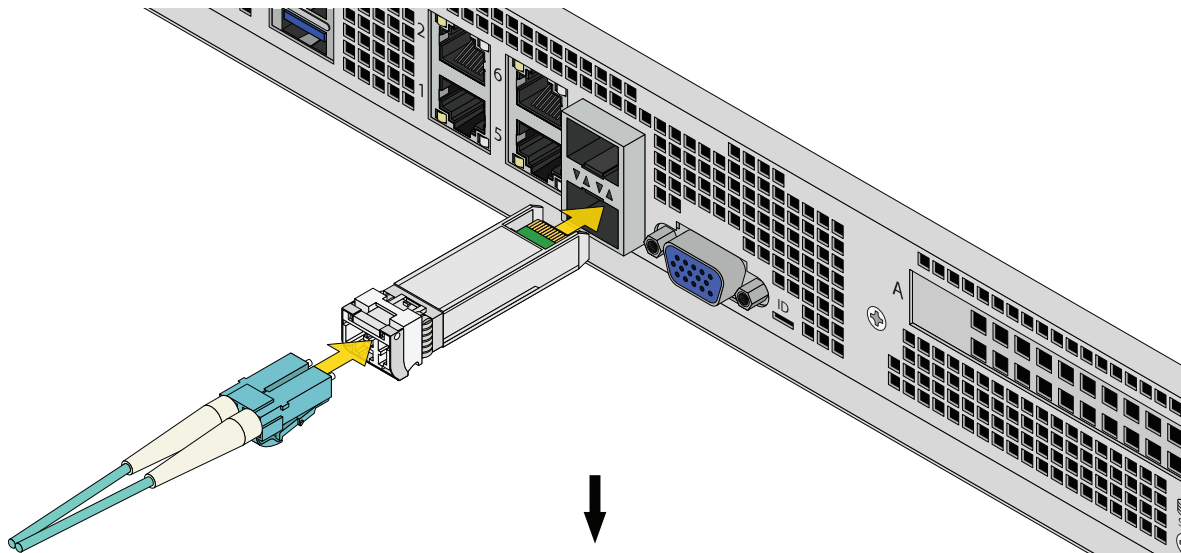


7.8.2 SAS Cabling

If you ordered your system with an expansion shelf, you can set up the SAS3 cable now. Line the SAS3 cable connector up with the SAS port on the back of the system.

Ensure the blue tab on the SAS cable is facing up. Gently push the connector into the port until it clicks.

See “8 SAS Connections” on page 15 or your expansion shelf documentation for SAS connection diagrams before booting the H-Series.

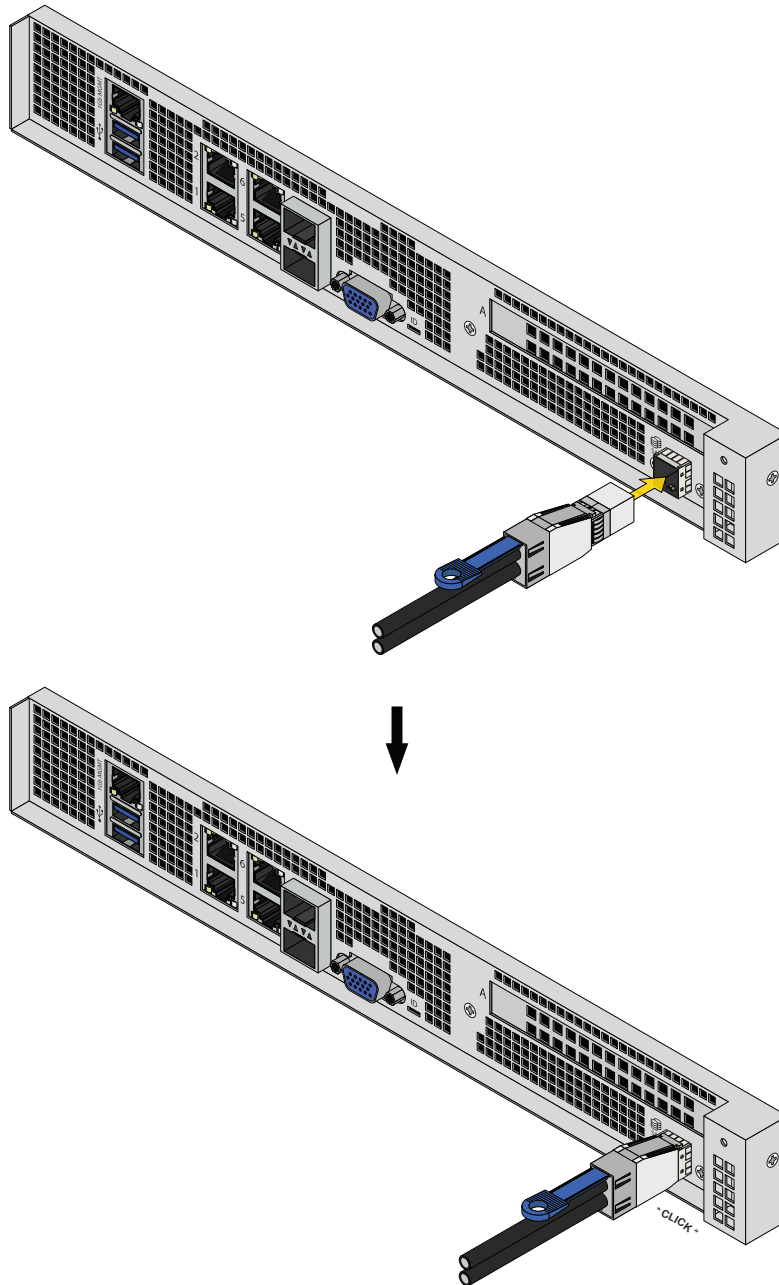

7.9 Boot the System

After plugging the power cables into outlets, the system powers on and boots into TrueNAS.

When booted, the system console displays the TrueNAS web UI IP address, which is either preconfigured according to customer guidelines or automatically generated with DHCP.

Enter the IP address into a browser on a computer on the same network to access the web user interface.

See your welcome email or the password stickers on each controller at the rear of the unit for login credentials.

8 SAS Connections

To set up SAS between your TrueNAS system and expansion shelves, cable the first port on the first TrueNAS controller to the first port on the first expansion shelf IOM/expander. High Availability (HA) systems require another cable from the first port on the second TrueNAS controller to the first port on the second expansion shelf controller.


We do not recommend other cabling configurations. Contact iX Support if you need other cabling methods.

If your TrueNAS system has HA, reboot or failover after connecting SAS cables to sync drives between controllers.


ⓘ Important - SAS Configuration

When setting up SAS connections, please adhere to the wiring example below. Connecting Expansion Shelves incorrectly causes errors. Never cable a single controller to different IOMs/expanders on the same shelf.


8.1 ES24

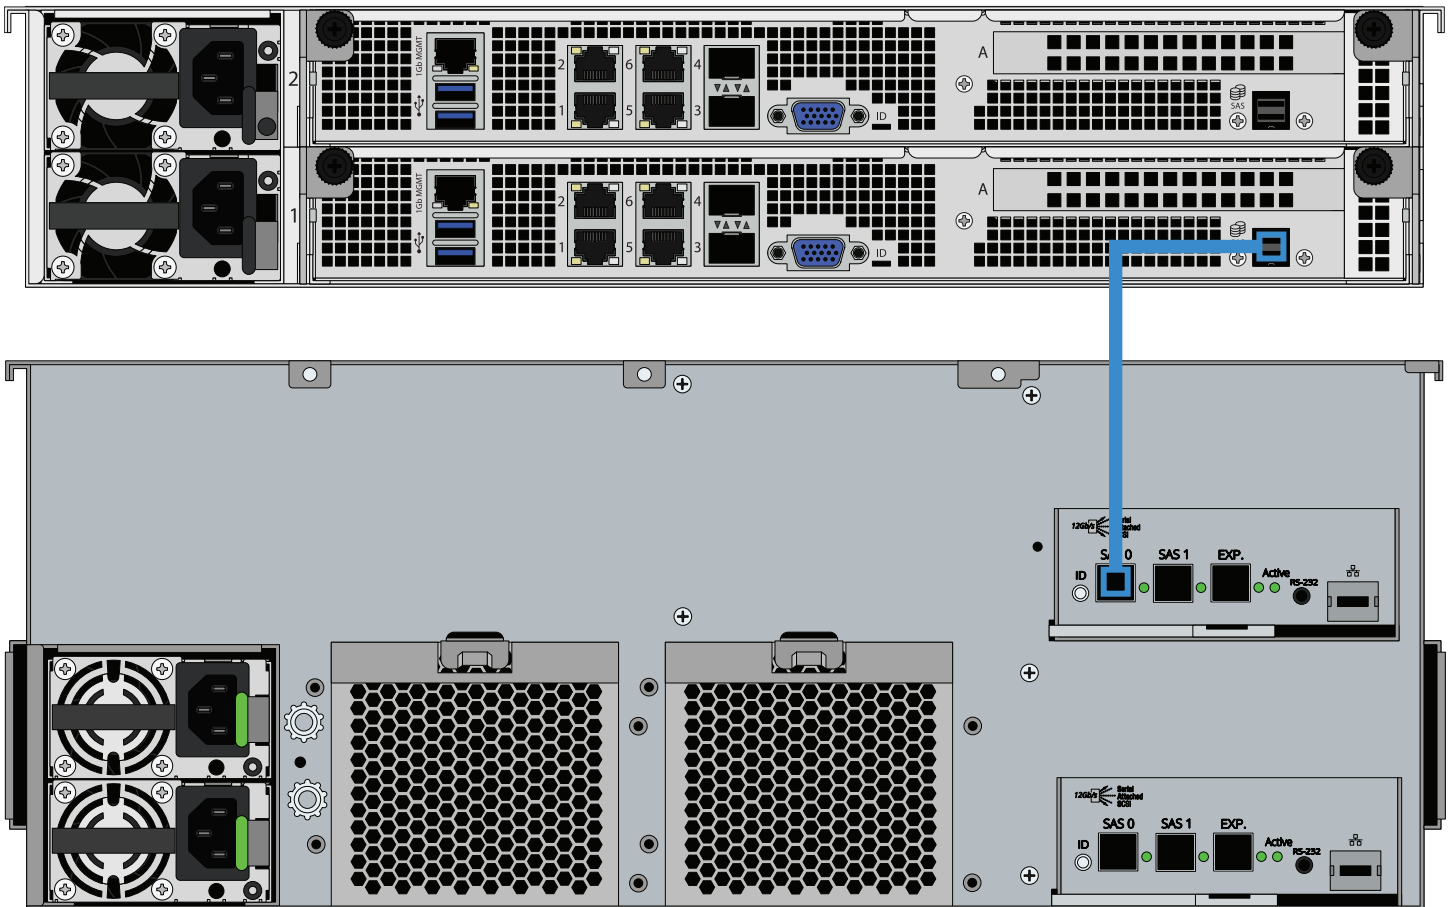

8.2 ES24F

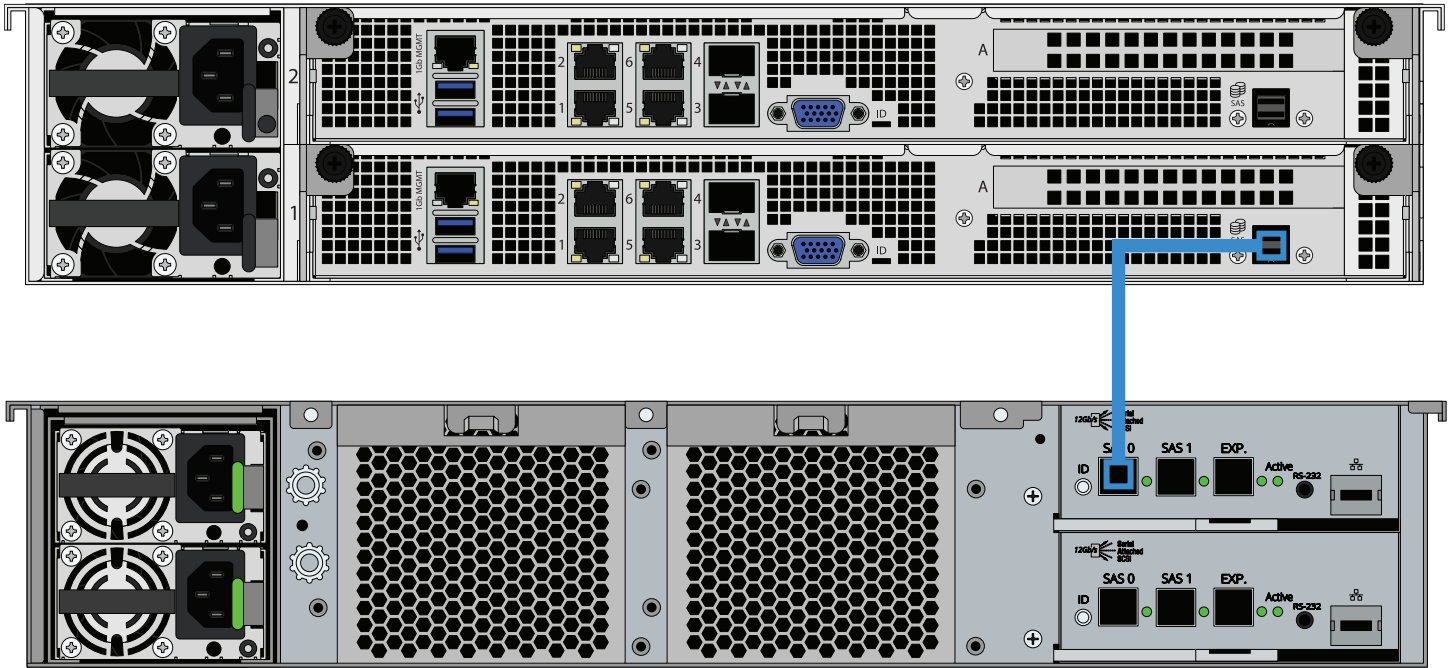


8.3 ES60

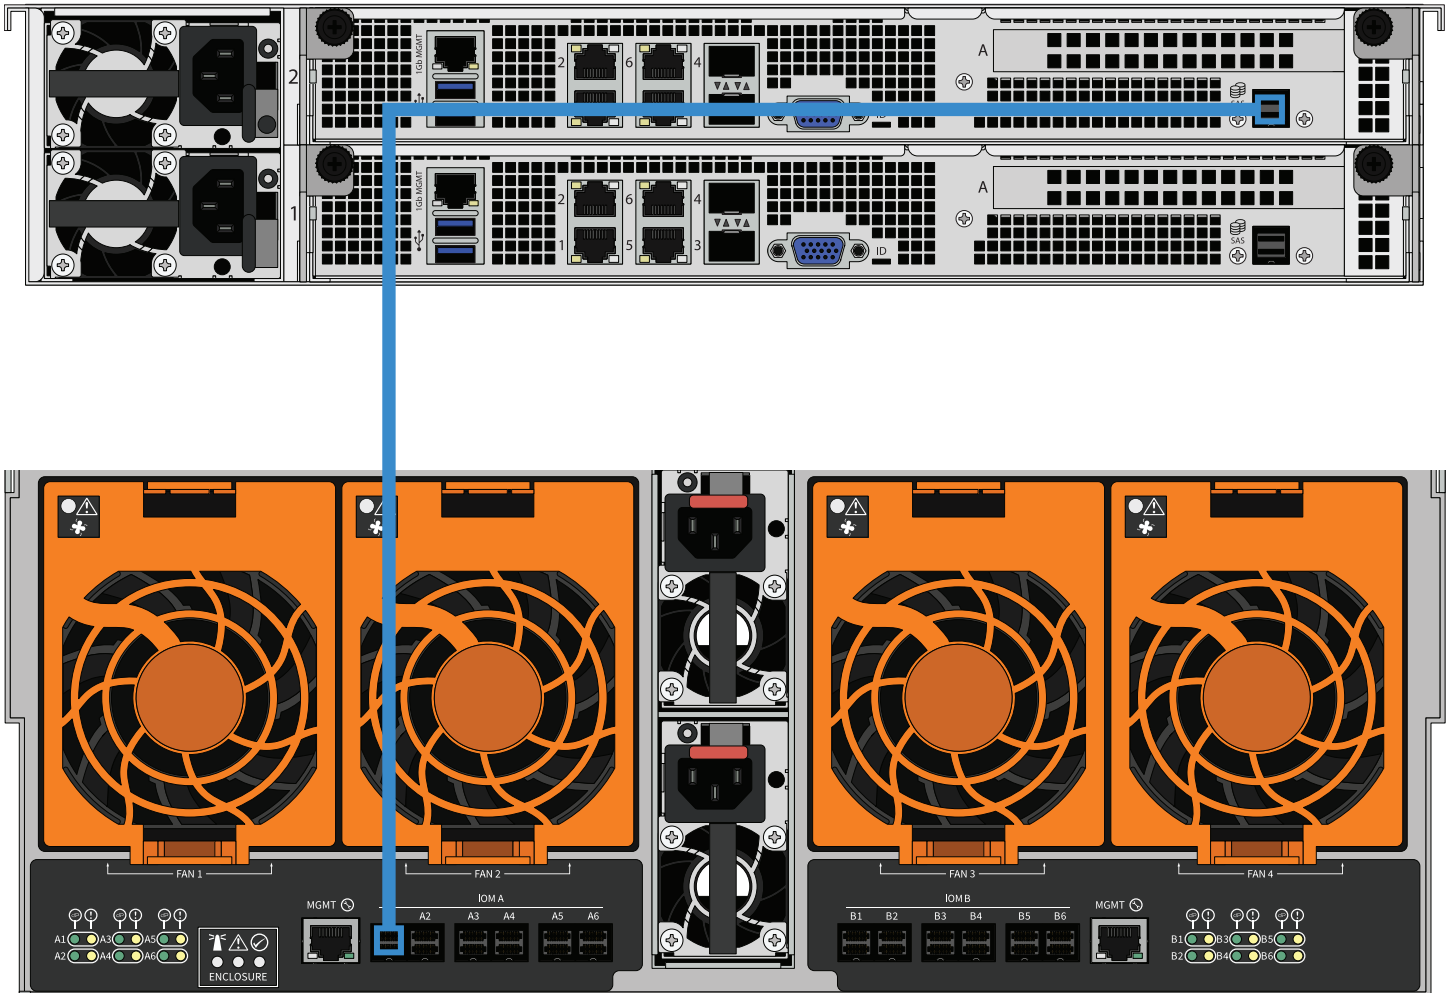

9 Unracking Procedure


9.1 Uninstall Cables

Disconnect both power cables from the PSUs, then disconnect all USB and networking cables.

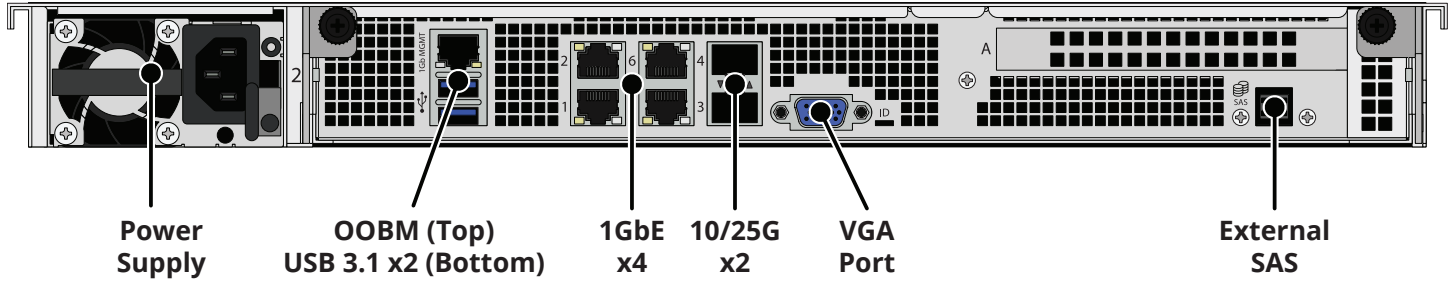


9.1.1 Disconnect 10/25G SR Cabling

Push the blue tab down on the connector to remove it from the optics. Pull the release on the optics to release them from the network port.

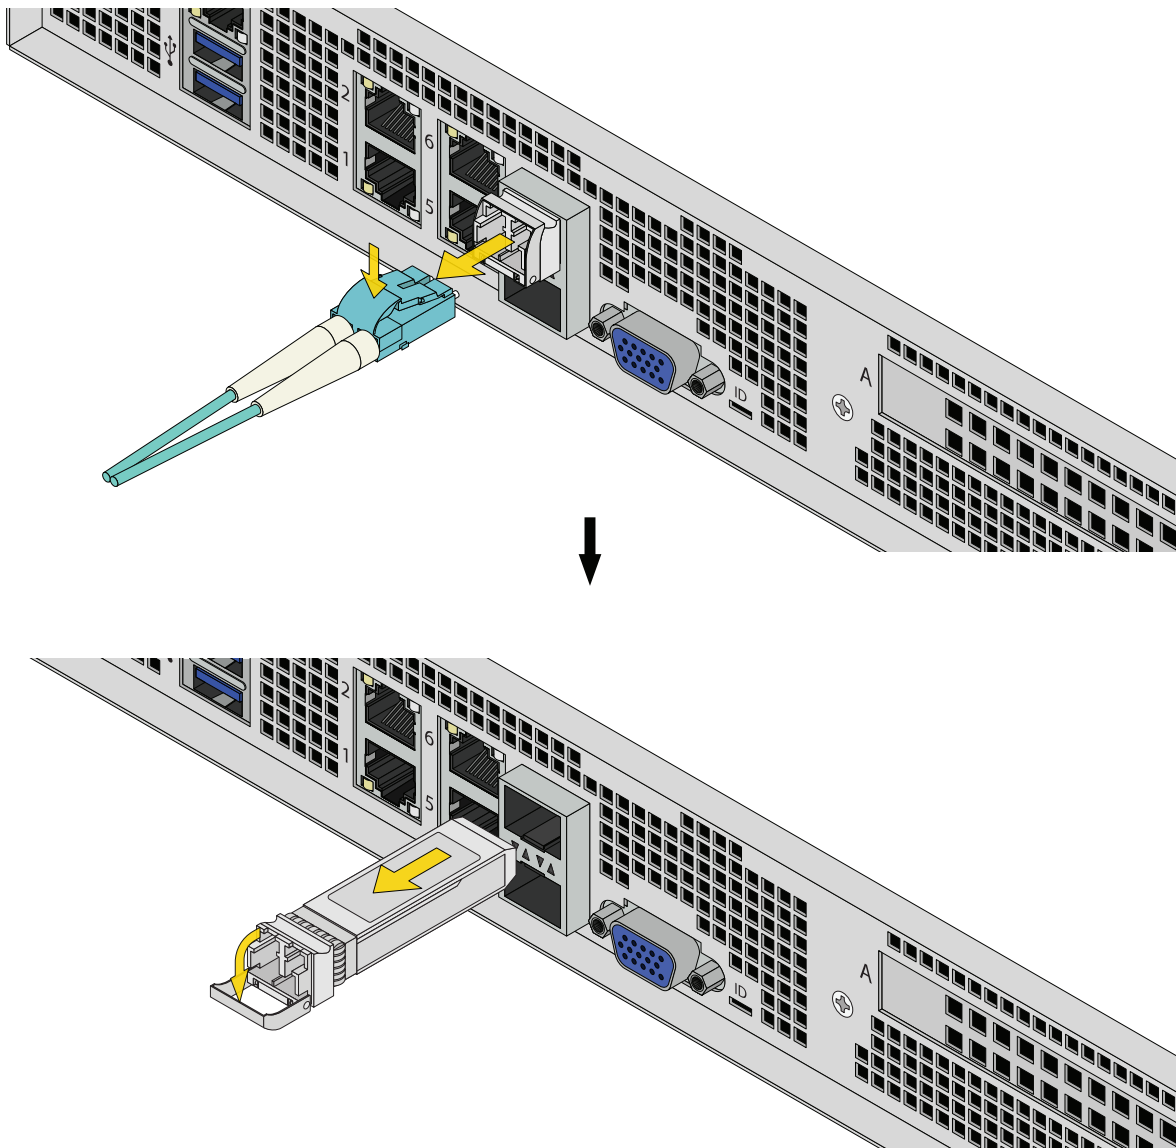


9.1.2 Disconnect SAS Cables

Pull the blue tab on top of the SAS cable to release it from the SAS port.

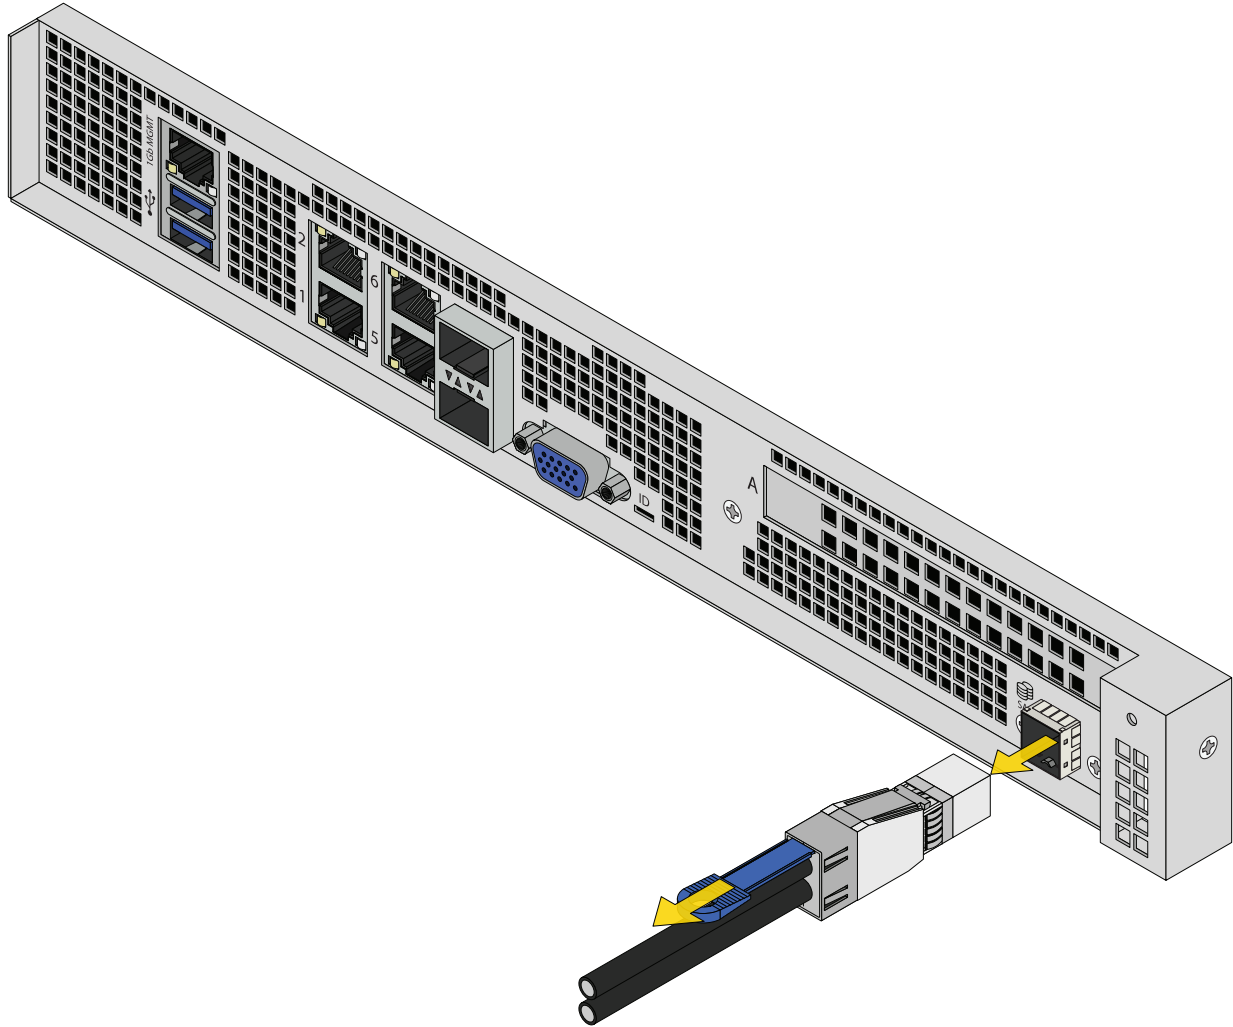

9.2 Remove Drives


Press the locking arm release on the left side of a tray. Swing the locking arm out until it stops, then pull the tray out of the system.

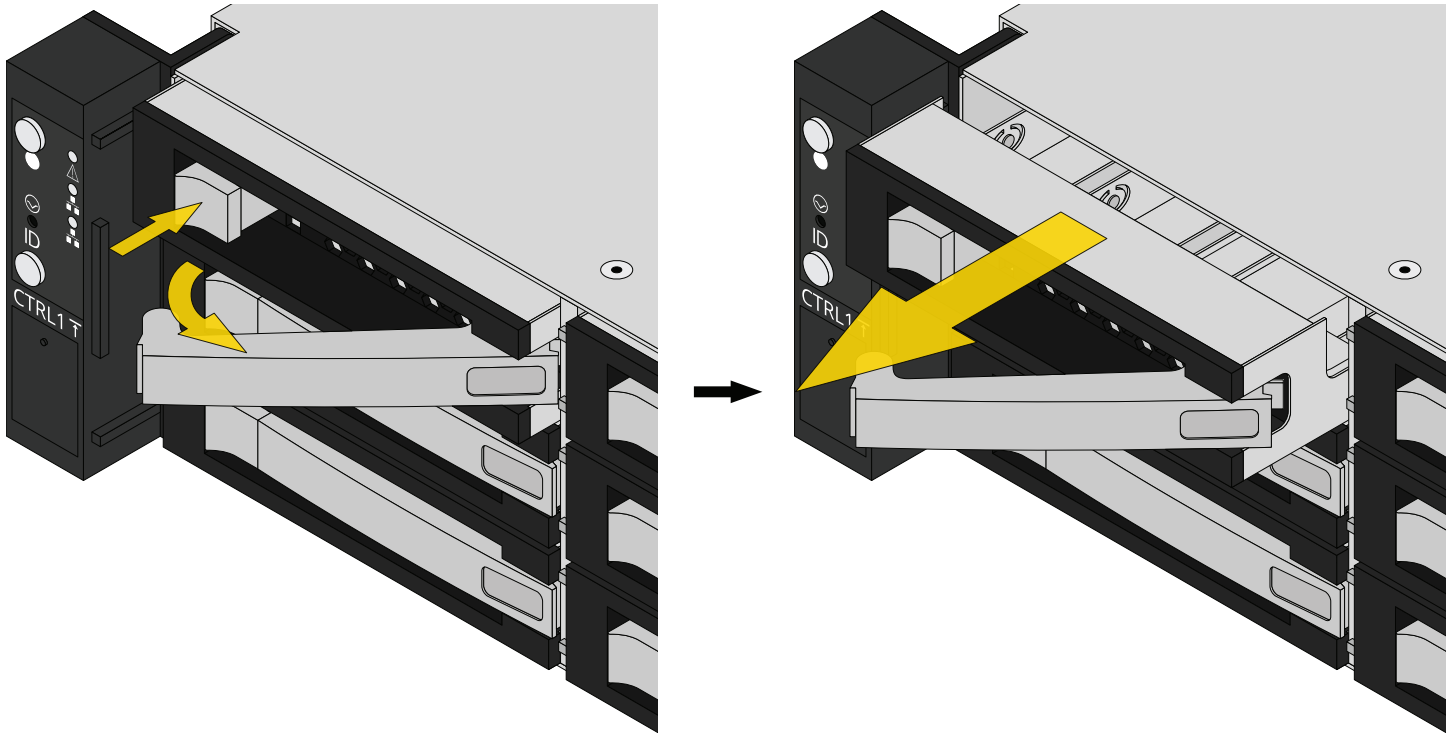

9.3 Remove the System From the Rack

The rail kit includes black M5 rack screws you can use to secure the chassis ears to the rack. Push in the hinged doors on each ear and remove the rack screws.


Pull the system out of the rack until the metal safeties click and lock. Squeeze the safety catches against the sides of the system and team-lift it out of the rack.

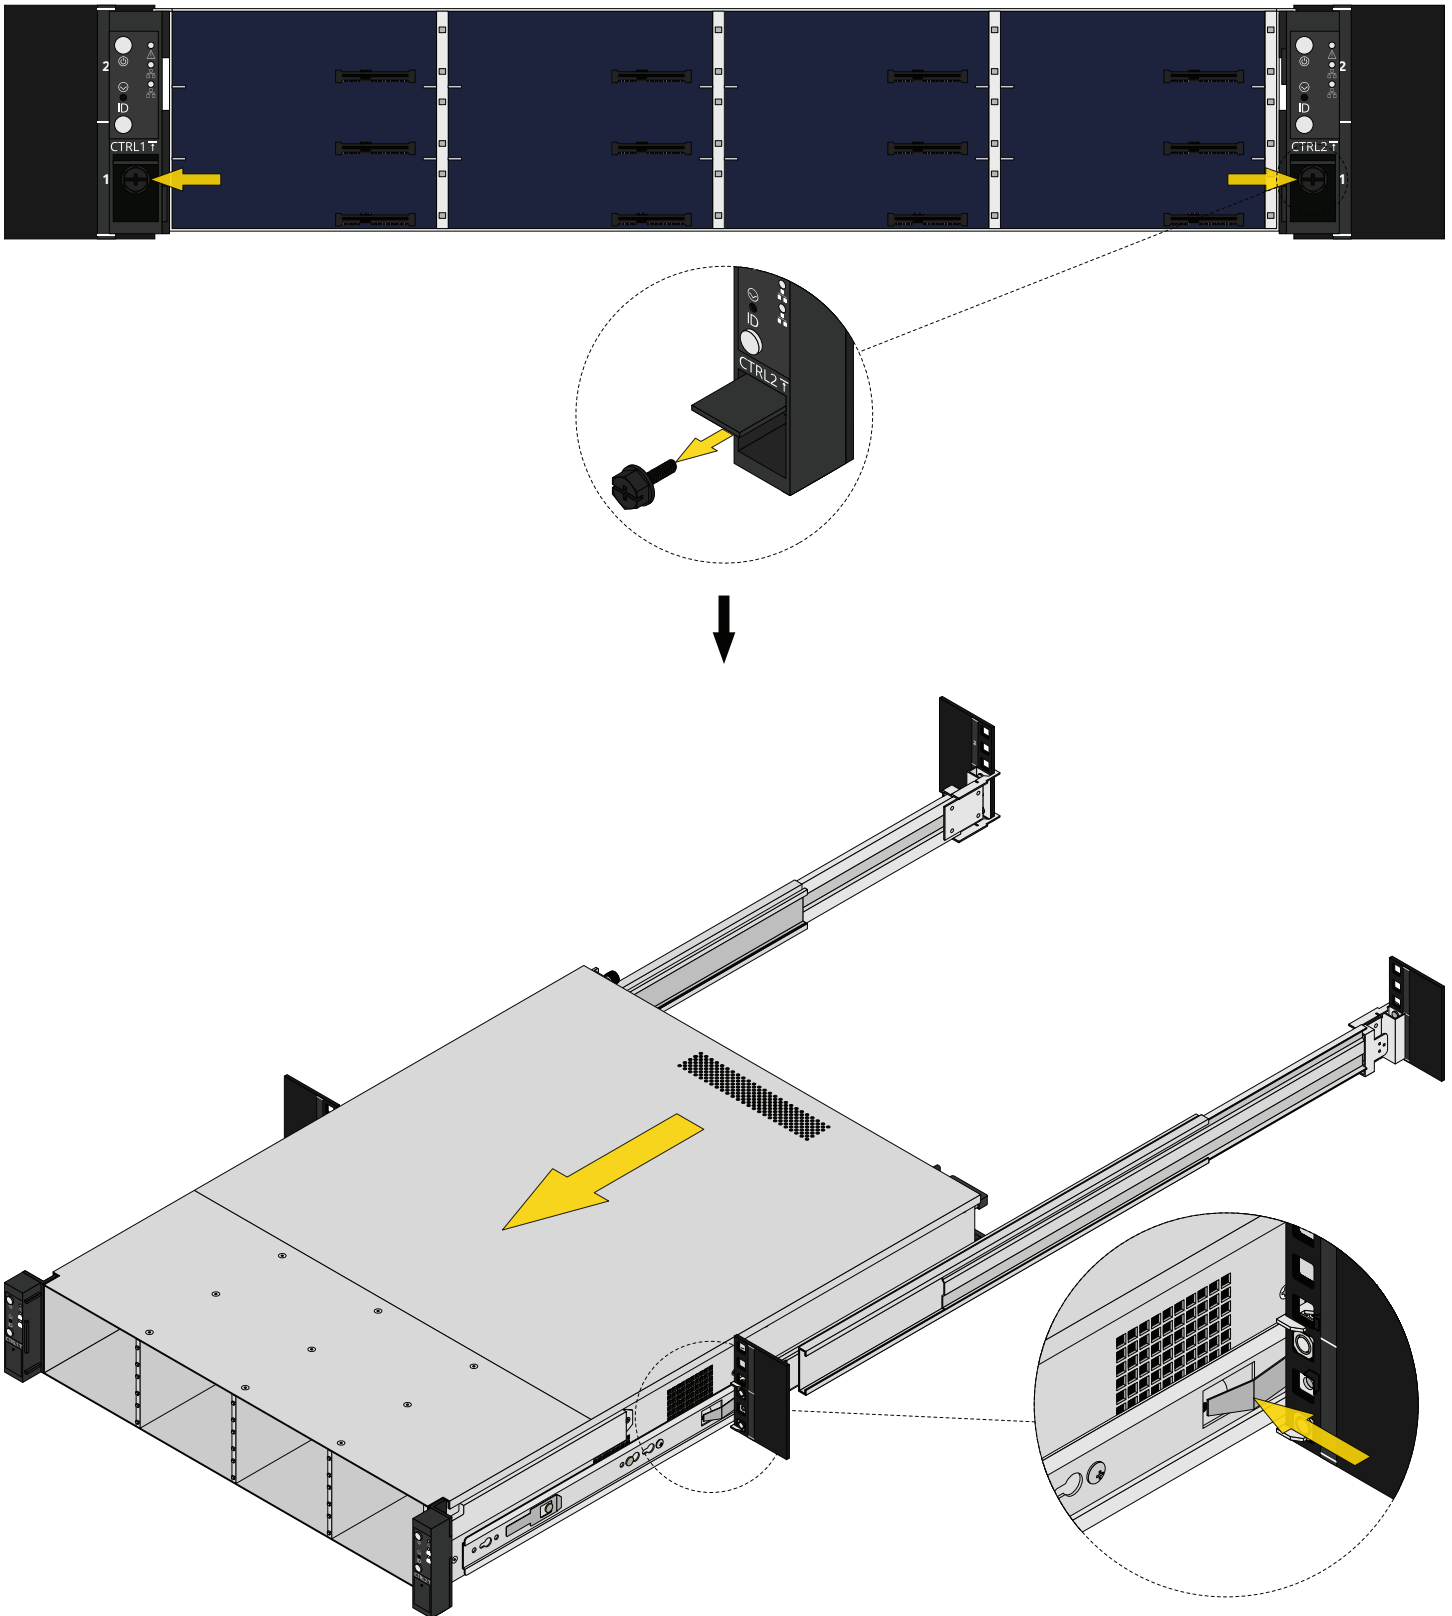

9.4 Remove the Rack Rail From the Rack


Press the spring latch plate on each side of the rail to release it from the rack, then remove the rail from the rack.

Repeat for the other rack rail.

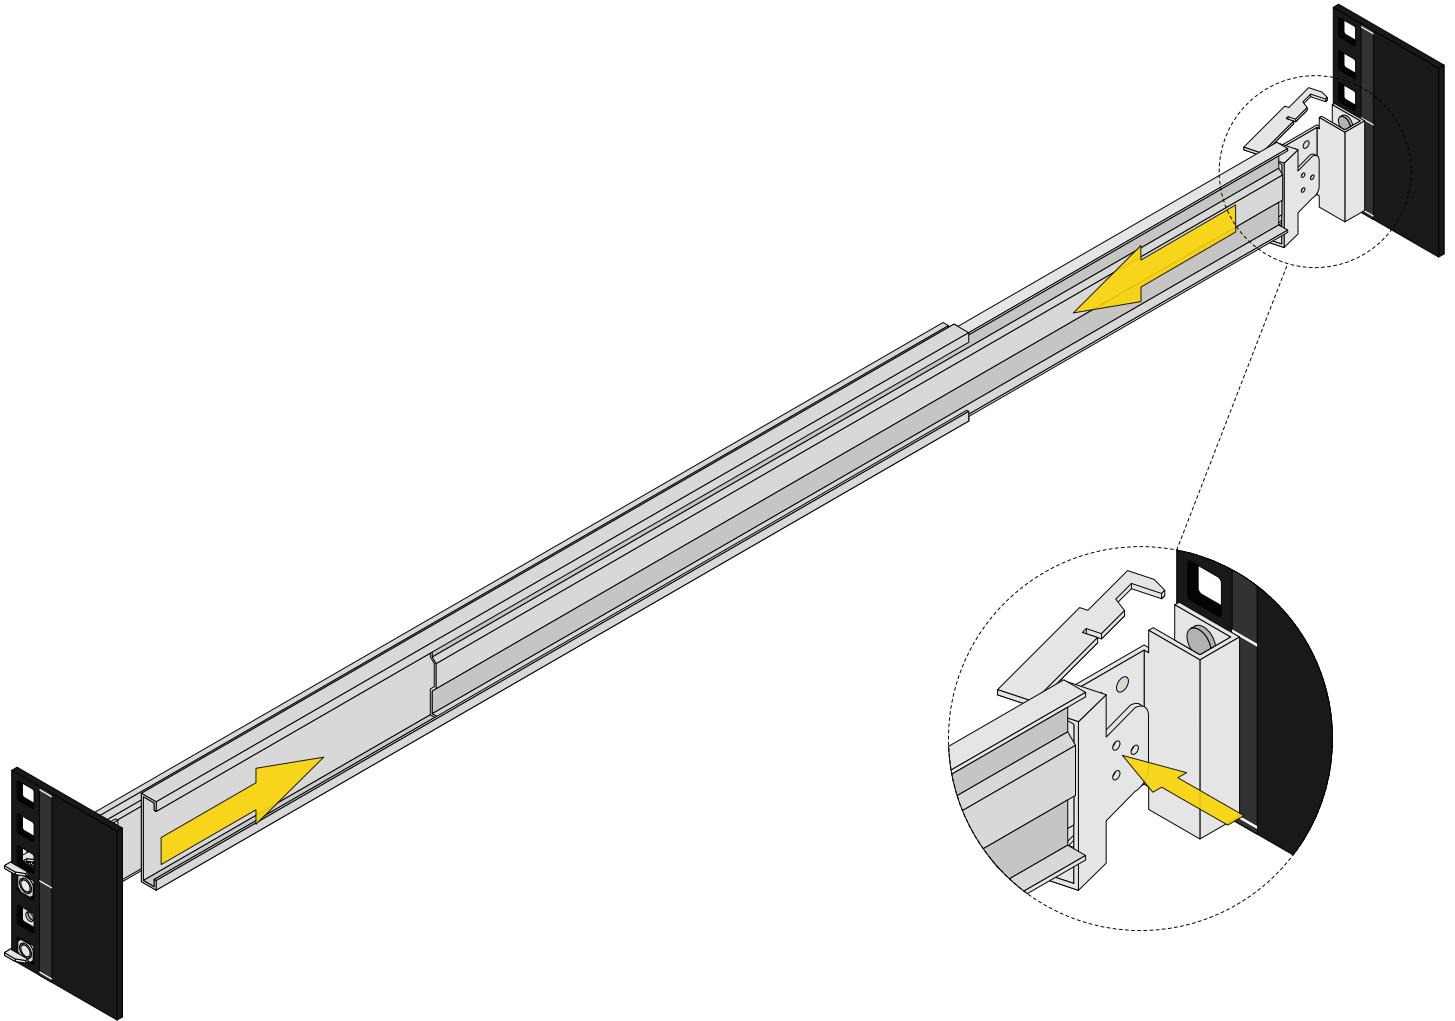

9.5 Remove the Chassis Rail From the System


Remove the round M4 screws from the chassis rails, then pull the retention latches away from the chassis rails and slide them toward the front of the system. Pull the chassis rails over the mounting pegs and away from the system.

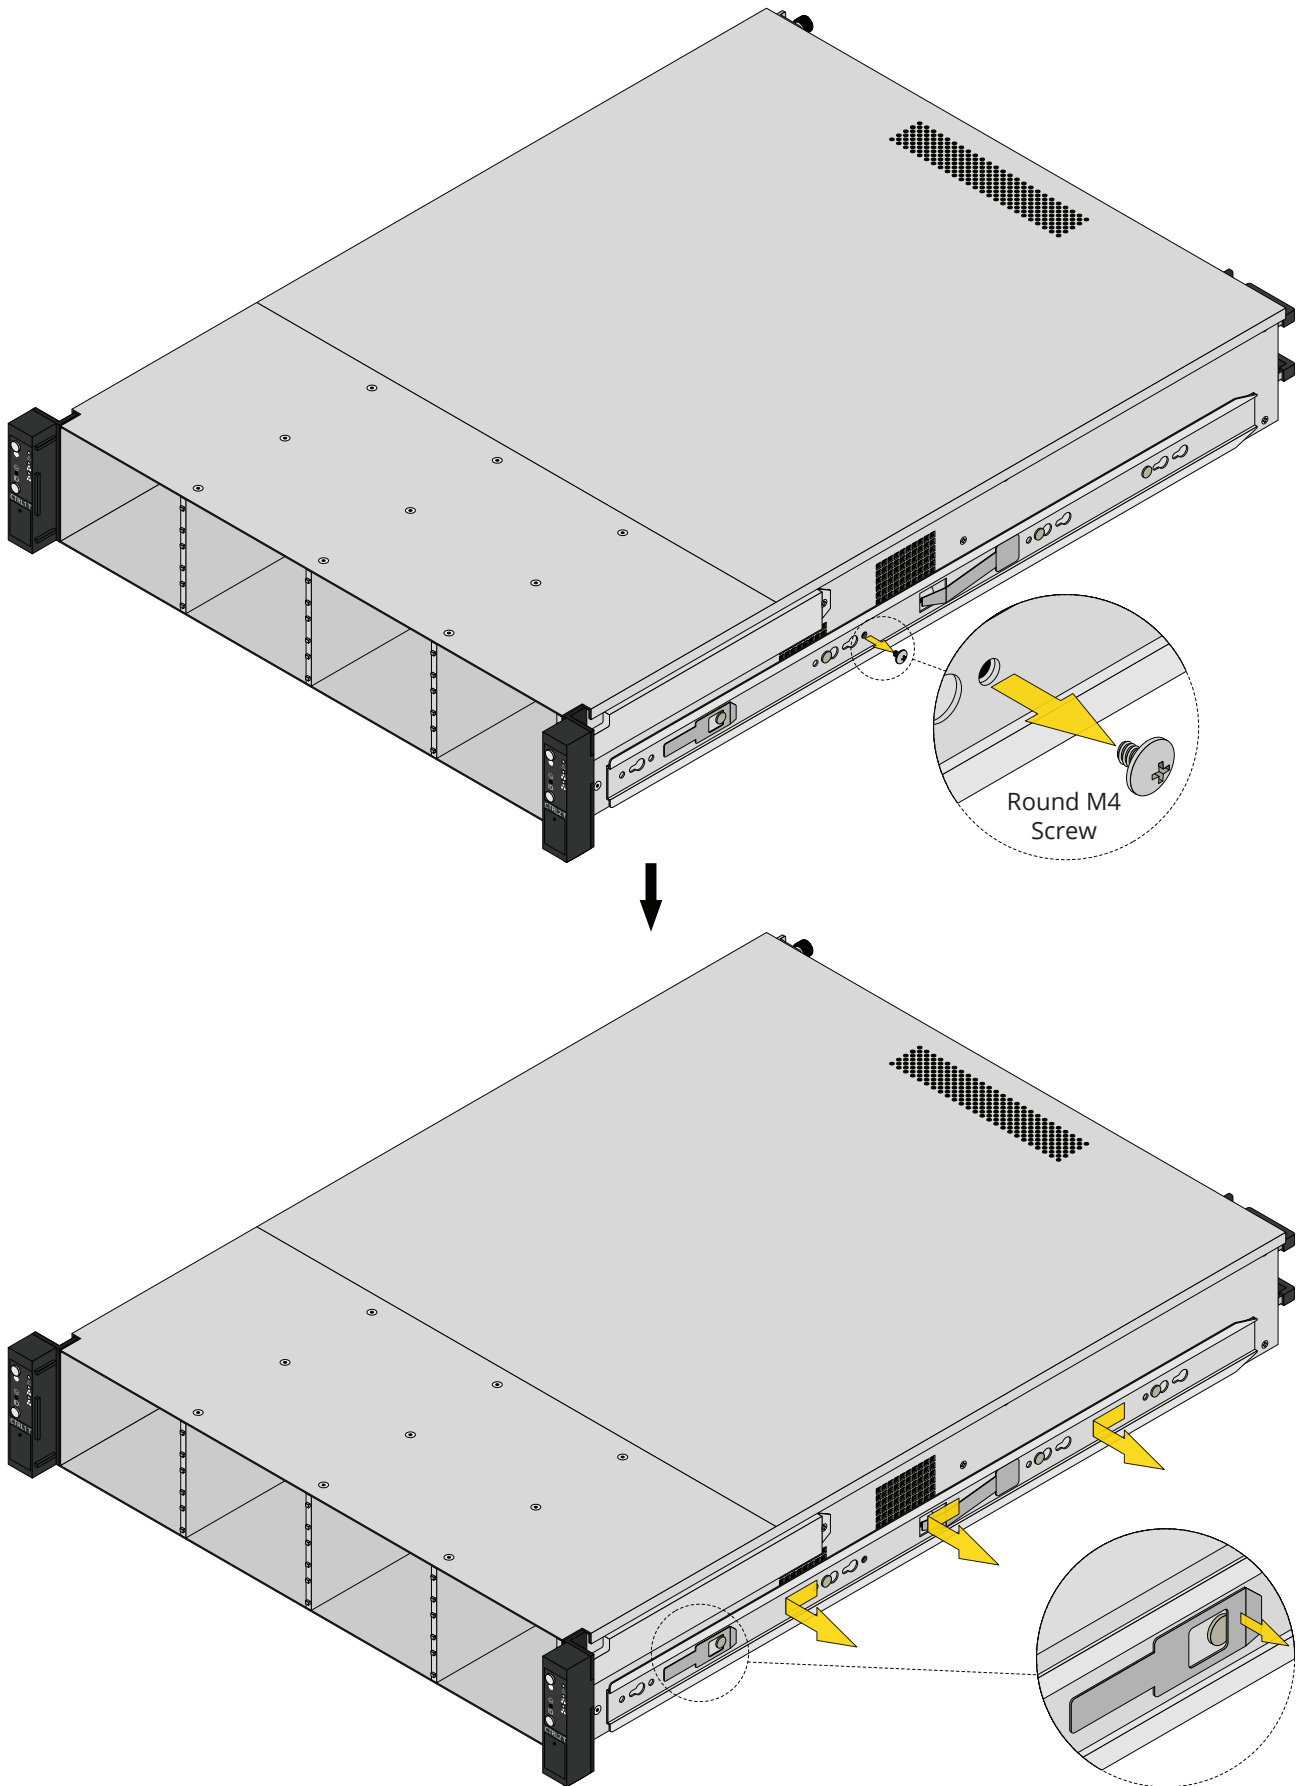


10 Drive Replacement

10.1 HDDs

To remove an HDD from a tray, push the side attached to the flexible pegs from underneath the tray, then lift the drive out.

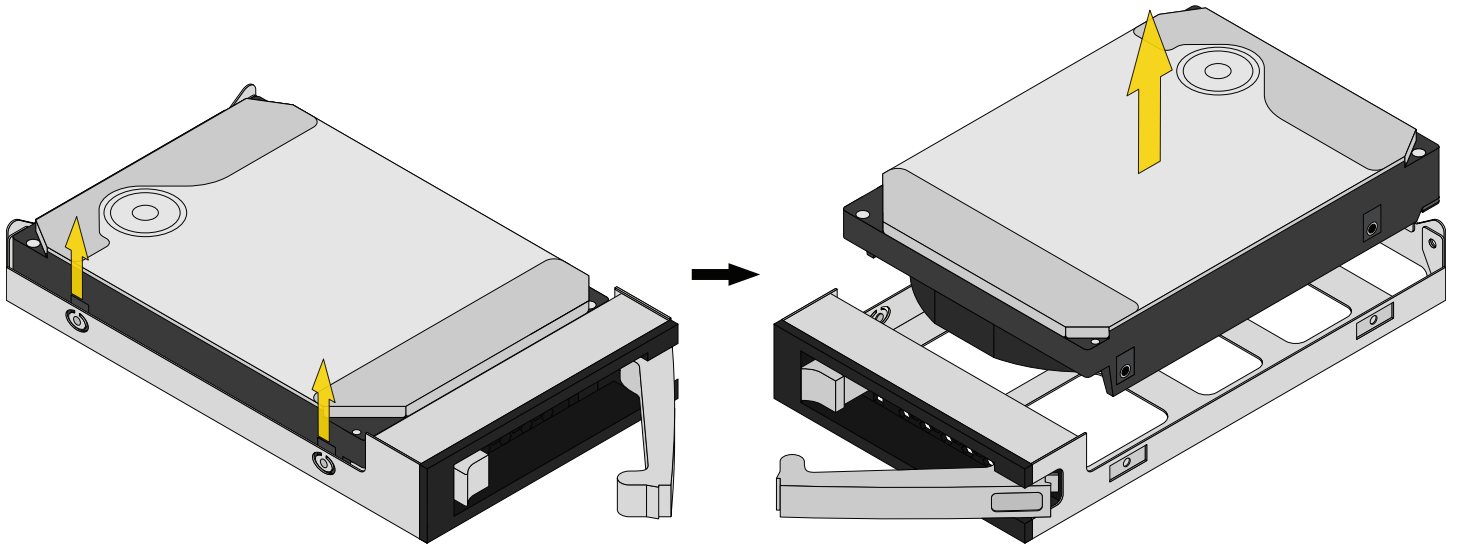


To install a drive in a tray, ensure the drive connectors point out the back of the tray and push the drive side screw holes into the fixed retention pegs on one side of the tray. Push the other side of the drive down into the flexible retention pegs to secure the drive.

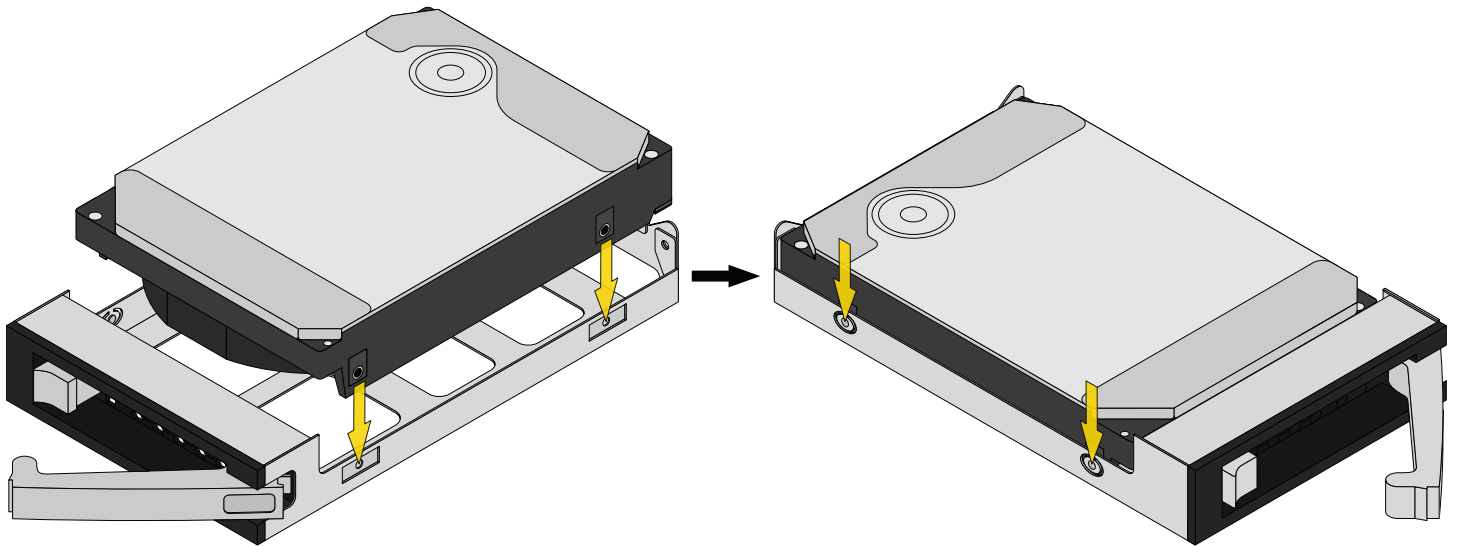


10.2 SSDs

To remove an SSD from a tray, remove the three 2.5" SSD screws from the bottom of the tray, then remove the drive from the tray.

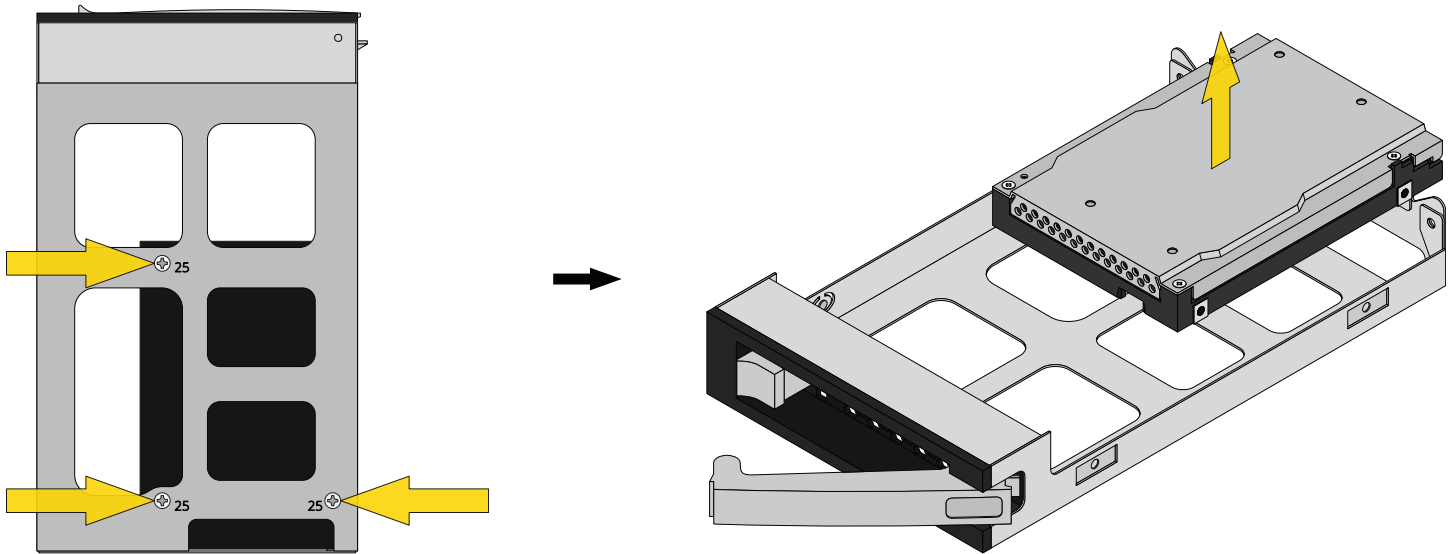

To install an SSD in a tray, ensure the drive connectors point out the back of the tray, then lower the drive into the tray. Install three 2.5" SSD screws to secure the drive to the tray.

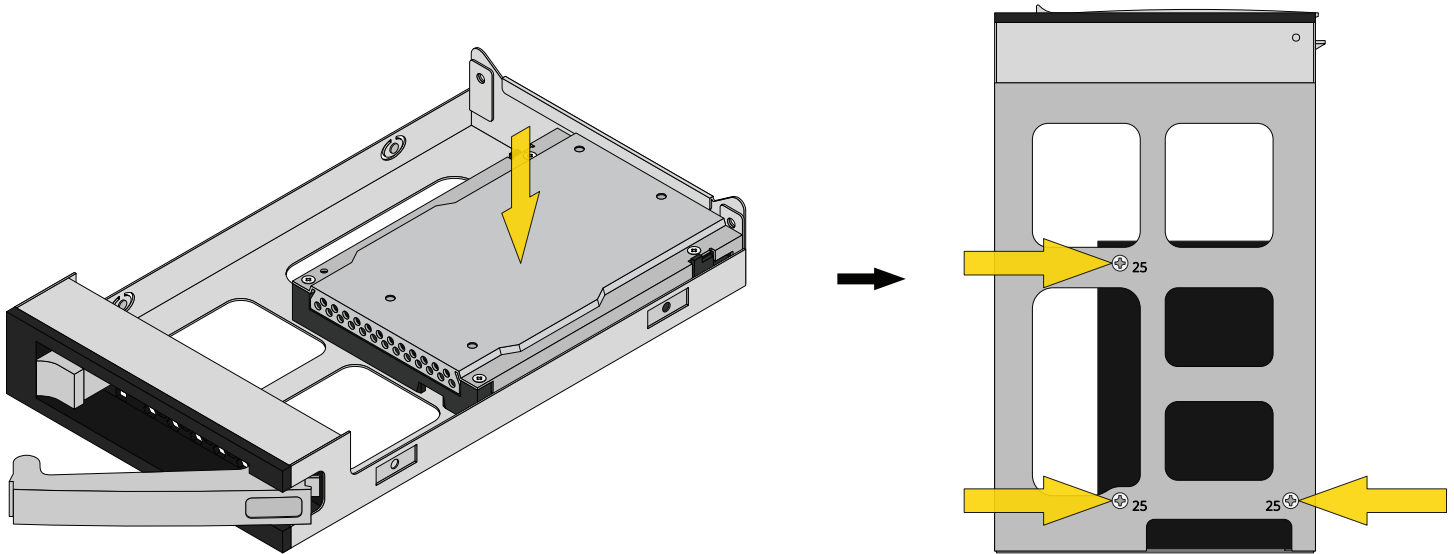

11 Additional Resources

The TrueNAS Documentation Hub has complete software configuration and usage instructions. Click **Guide** in the TrueNAS web interface or go directly to:

<https://www.truenas.com/docs>

Additional hardware guides and articles are in the Documentation Hub's Hardware section:

<https://www.truenas.com/docs/hardware>

The TrueNAS Community forums provide opportunities to interact with other TrueNAS users and discuss their configurations:

<https://www.truenas.com/community>

12 Contacting iXsystems

Having issues? Please contact iX Support to ensure a smooth resolution.

Contact Method	Contact Options
Web	https://support.ixsystems.com
Email	support@ixsystems.com
Telephone	Monday-Friday, 6:00AM to 6:00PM Pacific Standard Time: <ul style="list-style-type: none">• US-only toll-free: 1-855-473-7449 option 2• Local and international: 1-408-943-4100 option 2
Telephone	Telephone After Hours (24x7 Gold Level Support only): <ul style="list-style-type: none">• US-only toll-free: 1-855-499-5131• International: 1-408-878-3140 (International calling rates will apply)